

Pan / Tilt **TC5632/TC5633**
NETWORK CAMERA

User's Manual



Product name:	Wireless Network Camera with Pan/Tilt(TC5632/TC5633)
Release Date:	2008/01/04
Manual Revision:	1.00

Web site:	www.vivotek.com
Email:	technical@vivotek.com sales@vivotek.com

© 2008 VIVOTEK INC. All rights reserved

Before You Use This Product

The use of surveillance devices may be prohibited by law in your country. The Network Camera is not only a high-performance web-ready camera but also can be part of a flexible surveillance system. It is the user's responsibility to ensure that the operation of such devices is legal before installing this unit for its intended use.

It is important to first verify that all contents received are complete according to the list in the "Package Contents" chapter. Take notice of the warnings in "Quick installation guide" before the Network Camera is installed, then carefully read and follow the instructions in the "Installation" chapter to avoid damages due to faulty assembly and installation. This also ensures the product is used properly as intended.

The Network Camera is a network device and its use should be straightforward for those who have basic network knowledge. The "Troubleshooting" chapter in the Appendix provides remedies to the most common errors in set up and configuration. You should consult this chapter first if you run into a system error.

The Network Camera is designed for various applications including video sharing, general security/surveillance, etc. The "How to Use" chapter suggests ways to best utilize the Network Camera and ensure proper operations. For the creative and professional developers, the "URL Commands of The Network Camera" chapter serves to be a helpful reference to customize existing homepages or integrating with the current web server.


For paragraphs preceded by  the reader should use caution to understand completely the warnings. Ignoring the warnings may result in serious hazards or injuries.

Table of Contents

Before You Use This Product.....	2
Package Contents	5
Installation	6
Hardware installation	6
Software Installation	8
Initial Access to the Network Camera	8
Check Network Settings	8
Add Password to Prevent Unauthorized Access	8
How to Use	9
Authentication.....	9
Installing plug-in.....	10
Primary user's capability	12
Main Screen with Camera View	12
Privacy Mode.....	15
Client settings.....	17
Administrator's capability	20
Fine-tuning for Best Performance	20
Opening accounts for new users	23
Build a security application	24
Software revision upgrade	25
Definitions in Configuration	26
System parameters	28
Security settings	29
Network settings.....	31
Network type	31
HTTP	32
RTSP Streaming	32
WLAN Configuration (TC5633 only)	35
DDNS.....	38
Access List.....	39
Audio and Video.....	41

Video Settings.....	41
Video orientation	41
Image Settings	41
Audio settings	44
Camera Control	46
Motion detection	48
Application	50
Event.....	51
Server	52
Media	54
System log.....	56
Viewing system parameters.....	57
Maintenance.....	59
Appendix.....	61
A. Troubleshooting	61
Status LED	61
Reset and restore	61
B. URL commands of the Network Camera	62
Get server parameter values	62
Set server parameter values	63
Available parameters on the server	65
Camera Control	77
Recall	78
Application page CGI command	78
Capture single snapshot	81
Account management	82
System logs.....	83
Configuration file	84
Upgrade firmware.....	84
C. Technical specifications	86

Package Contents

● **TC5632 / TC5633**



● **Quick installation guide**




● **Warranty card**




● **Screws**



● **Back cover**

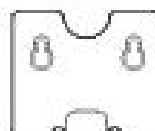


● **Power adapter**

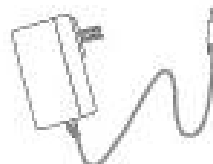

● **Software CD**



● **Alignment Sticker**

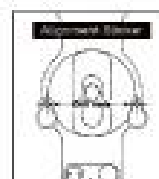

Installation


In this manual, "User" refers to whoever has access to the Network Camera, and "Administrator" refers to the person who can configure the Network Camera and grant user access to the camera.


Hardware installation

Please verify that your product package contains all the accessories listed in the foregoing Package Contents. Depending on the user's application, an Ethernet cable may be needed. The Ethernet cable should meet the specs of UTP Category 5 and not exceed 100 meters in length.

● Install your Network Camera in Ethernet network

1. Connect the Network Camera to a switch via Ethernet cable.
 - Use Category 5 Cross Cable when Network Camera is directly connected to PC.
2. Connect the power cord from the Network Camera to a power outlet.
3. Fasten the power cord to the power cord holder so as to prevent it from being accidentally disconnected.
4. Close the cover by sliding it in the direction of arrow.
4. Use a screwdriver to secure the cover screws.

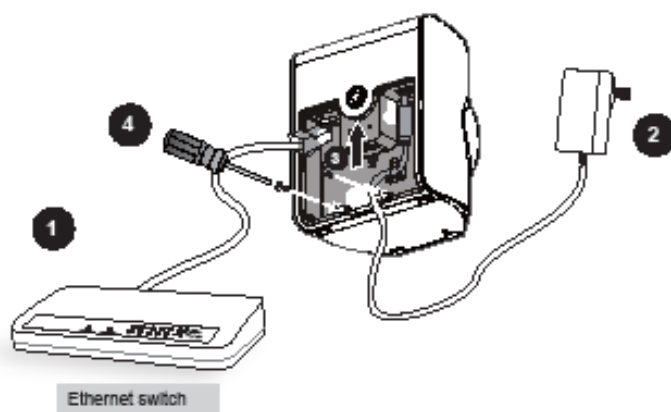

 Connect the power adapter jack to the Network Camera before plugging in to the power socket. This will reduce the risk of accidental electric shock.

The following table lists the LED patterns in general:


Condition	LED color
Loading system after power on	Steady red
During booting procedure	Steady blue and red
After network is setup (system up)	Blink green every second
During the upgrade firmware process	Fast blink red
Enable audio	Slowly blink green

To install in Ethernet

Make sure the Ethernet is firmly connected to a switch hub. After attaching the Ethernet cable plug in the power adapter. If the LED turns out to be blink green, go to next paragraph "Software installation". If the Ethernet is not available, Network Camera will switch to wireless LAN mode.

This Network Camera provides a general I/O terminal block with one digital input and one digital output device control. The pin definition is as below.

1. Power
2. Digital output
3. Digital input
4. ground

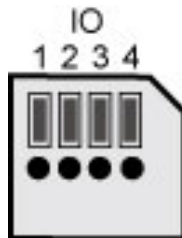

Software Installation

At the end of the hardware installation, users can use "Installation Wizard 2" program included in the product CDROM to find the location of the Network Camera. There may be many Network Cameras in the local network. Users can differentiate the Network Cameras with the serial number. The serial number is printed on the labels on the carton and the back of the Network Camera body. Please refer to the user's manual of Installation Wizard 2 for details.

Initial Access to the Network Camera

Check Network Settings

The Network Camera can be connected either before or immediately after software installation onto the Local Area Network. The Administrator should complete the network settings on the configuration page, including the correct subnet mask and IP address of gateway and DNS. Ask your network administrator or Internet service provider for the detail information. By default the Network Camera requires the Administrator to run installation every time it reboots. If the network settings are to remain unchanged, disable the Install option. Refer to "Network settings" on the System Configuration page for details. If any setting is entered incorrectly and cannot proceed to setting up the Network Camera, restore the factory settings following the steps in the "Troubleshooting" chapter of the Appendix.

Add Password to Prevent Unauthorized Access

The default Administrator's password is blank and the Network Camera initially will not ask for any password. The Administrator should immediately implement a new password as a matter of prudent security practice. Once the Administrator's password is saved, the Network Camera will ask for the user's name and password

before each access. The Administrator can set up a maximum of twenty (20) user accounts. Each user can access the Network Camera except to perform system configuration. Some critical functions are exclusive for the Administrator, such as system configuration, user administration, and software upgrades. The user name for the Administrator is permanently assigned as "root". Once the password is changed, the browser will display an authentication window to ask for the new password. **Once the password is set, there is no provision to recover the Administrator's password. The only option is to restore to the original factory default settings.**

How to Use

Authentication


After opening the Web browser and typing in the URL of the Network Camera, a dialogue window pops up to request a username and password. Upon successful authentication, the following figure is displayed.


The foreground is the login window and the background shows the message if authentication fails. The user may check the option box to save the password for future convenience. This option is not available to the Administrator for obvious reason.



*If the administrator (root user) assigns no password, everybody can access the homepage directly.

Installing plug-in

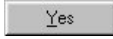For the initial access to the Network Camera in Windows, the web browser may prompt for permission to install a new plug-in for the Network Camera. Permission request depends on the Internet security settings of the user's PC or notebook. If the highest security level is set, the computer may prohibit any installation and execution attempt. This plug-in has been registered for certificate and is used to display the video in the browser. Users may click on  to proceed. If the web browser does not allow the user to continue to install, check the Internet security option and lower the security levels or contact your IT or networking supervisor for help.

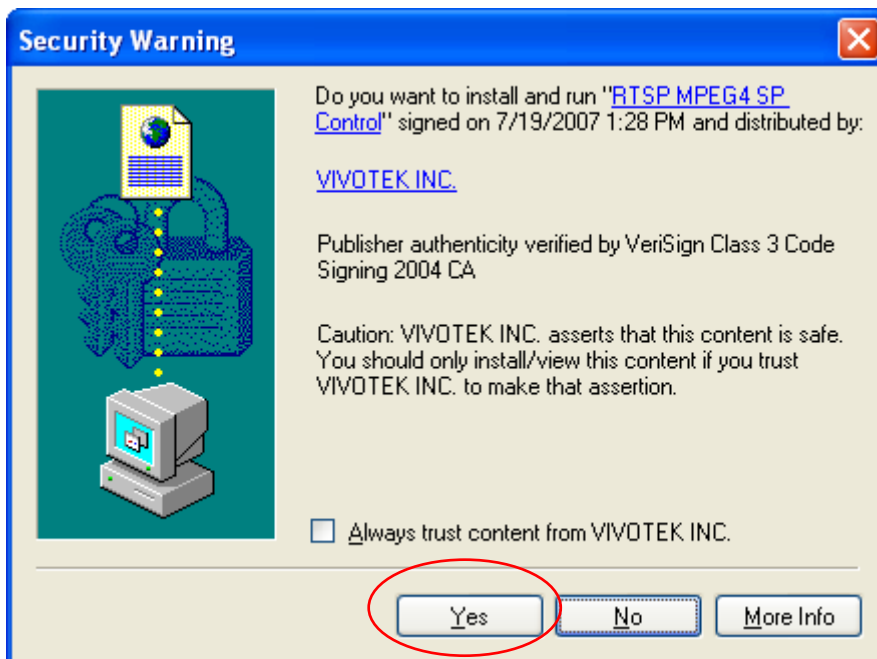

Primary user's capability

Main Screen with Camera View


The main page layout has three parts:

Configuration functions: The camera can be configured using these user interfaces.

Camera View: What the camera sees.

Pan/Tilt control buttons: These buttons provide a command interface to control the aim of the camera.

Click on the configuration link to the left of the image window to enter the configuration page.

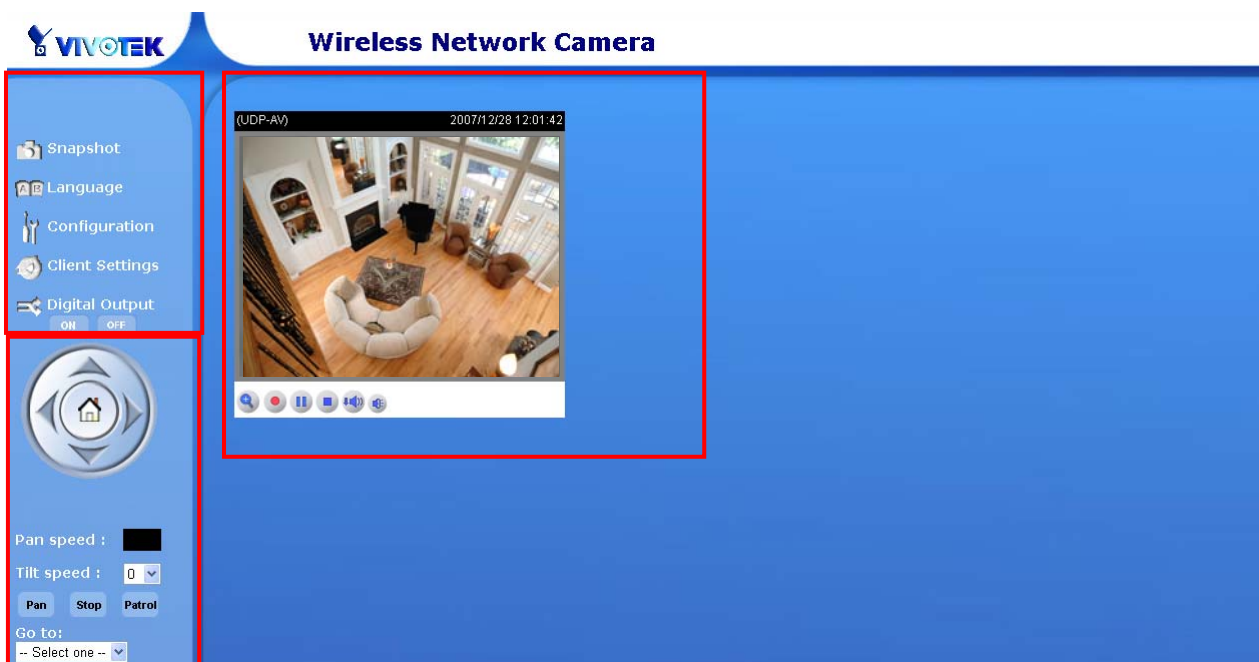

The Configuration:

"Snapshot" The button provides users a fast way to capture a single image of the video from the Network Camera.

"Client Settings"


Clicking on this button links you to the client setting pages, please check the following session for more details.

“Configuration” Only the Administrator can access camera configurations.

The camera view:

The information bar at the top of the camera view shows the connection type to the Network Camera and the current date/time.

The camera view provides not only the live video, but also a way to aim the Network Camera to different target. Using mouse to click on the target inside the video will command the Network Camera to aim at the target.

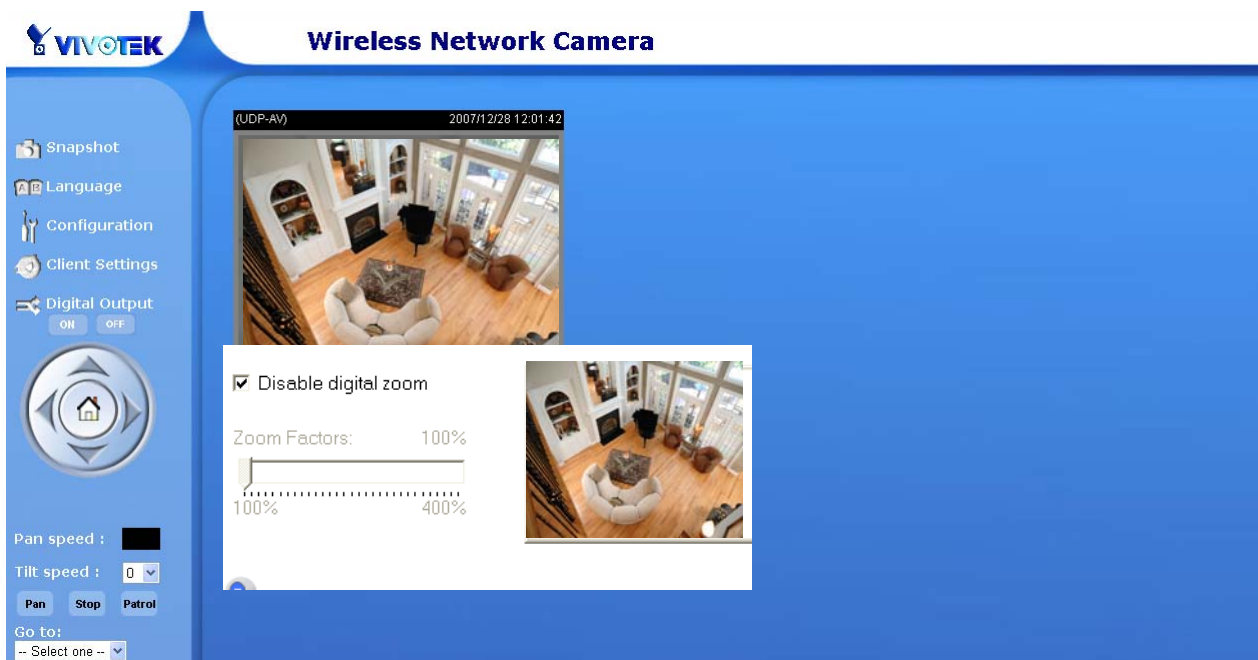

View capabilities

This feature allows users to open a digital zoom control window to specify the zoom factor for specified area in the camera view. Users can also move the white frame to select the area of the video that she/he wants to view.

“Disable digital zoom” The checkbox selection allows users to disable/enable the digital zoom function.

“Zoom Factors” The range of zoom factor is from 100% to 400%, users can select any integer factor inside this area.



"Play" The option will connect to the Network Camera. The button is the same one as **"Pause"**.

"Pause" The option will pause the video, but the connection remains. The button is the same one as **"Play"**.

"Stop" The option will disconnect to the Network Camera.

"Play volume" Click on this button can adjust the audio volume.

"Mute" Disable audio at client side.

"Record" This option will start MP4 recording.

The pan/tilt control buttons:

The direction buttons are for Left, Right, Up, Down, and Home functions. The Home button centers the camera.

"Go to" Once the Administrator has determined the preset positions; the User can aim the camera using this control.

"Pan speed"

This button sets the moving range of the "Left" and "Right" commands.

"Tilt speed"

This button sets the moving range of the "Up" and "Down" commands.

"Pan"

This button commands the camera to pan from the current position to the left-most and then to the right-most position. After panning, the camera returns to the original position.


"Patrol"

This button commands the camera to patrol between the preset positions on the Patrol List, which can be modified on the "Camera control page". After one patrol cycle, the camera returns to the original position.

"Stop" This stops the "Auto Pan" command or "Auto Patrol" command.

Privacy Mode

The privacy button, located on the lower part of the camera body, is used to turn off the streaming media at the clients. This helps to protect people's privacy when they do not want to be seen by the camera. When the privacy mode is activated, the Status LED blinks in blue. To disable it, press the privacy button again.

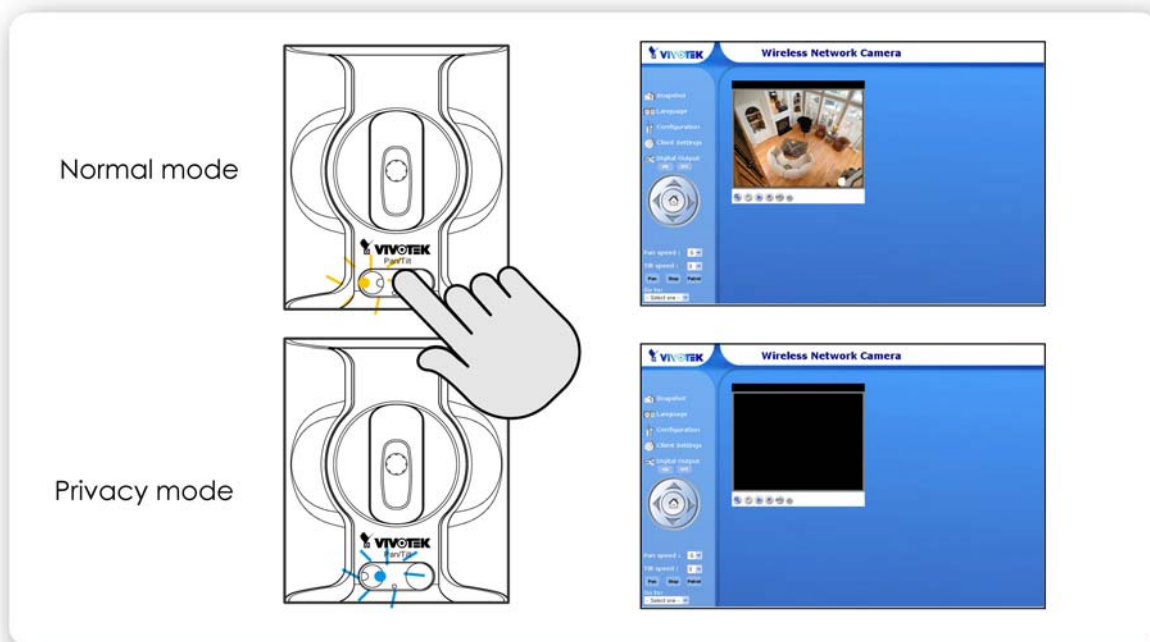

The **UDP** protocol allows for more real-time audio and video streams. However, some packets may be lost due to network burst traffic and images may be obscured.

The **TCP** protocol allows for less packet loss and produces a more accurate video display. The downside with this protocol is that the real-time effect is worse than that with the UDP protocol.

The **HTTP** protocol allows the media can be streaming through http port when the UDP or TCP protocol are blocked.

If no special need is required, UDP protocol is recommended. Generally speaking, the client's choice will be in the order of UDP → TCP. After the Network Camera is connected successfully, "Protocol Option" will indicate the selected protocol. The selected protocol will be recorded in the user's PC and will be used for the next connection. If the network environment is changed, or the user wants to let the web browser to detect again, manually select the UDP protocol, save, and return HOME to re-connect.

Configuration

Home

> Client Settings

Stream Options
☒ Stream 1
☐ Stream 2

MPEG-4 Media Options
☒ Video and Audio
☐ Video Only
☐ Audio Only

MPEG-4 Protocol Options
☒ UDP Unicast
☐ UDP Multicast
☐ TCP
☐ HTTP

MP4 Saving Options
Folder: C:\Documents and Settings\rei
File name prefix:
☒ Add date and time suffix to file name


<url> *http://<Network Camera>/client.html*

<Network Camera> is the domain name or the original IP address of the Network Camera.

Administrator's capability

Fine-tuning for Best Performance

Best performance generally equates to the fastest image refresh rate with the best video quality, and at the lowest network bandwidth as possible. The three factors, "Maximum frame rate", "Constant bit rate", and "Fix quality" on the Audio and Video Configuration page, are correlative to allow for achieving the best performance possible.


Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Audio and video

Video settings

Video title:

Color: Color

Power line frequency: 60 Hz

Video orientation: ☐ Flip ☐ Mirror

Maximum Exposure Time: Auto

☐ Overlay title and time stamp on video and snapshot.

Image Settings

Video quality settings for stream 1

Mode: MPEG-4

Frame size: 320x240

Maximum frame rate: 30 fps

Intra frame period: 1 S

Video quality

☐ Constant bit rate: 512 Kbps

☒ Fixed quality: Good

Video quality settings for stream 2

Mode: JPEG

Frame size: 320x240

Maximum frame rate: 30 fps

Video quality: Good

Audio Settings

☐ Mute

Internal microphone input gain: +3 dB

Audio type: ☐ AAC ☒ GSM-AMR

AAC bit rate: 128 Kbps

GSM-AMR bit rate: 12.2 Kbps

Save

For Viewing by Mobile Phone

Most 3GPP cell phone supports media streaming with MPEG4 video and GSM-AMR audio. Due to the limitation of the bandwidth for 3GPP, only 176x144 size video is supported for cell phone viewing. Select the "Configure for mobile viewing" option will change the range of other related video settings.

For Best Real-time Video Images

To achieve good real-time visual effect, the network bandwidth should be large

enough to allow a transmission rate of greater than 20 image frames per second. If the broadband network is over 1 Mbps, set the "Fix bit rate" to 1000Kbps or 1200Kbps. The maximum frame rate is 30. If your network bandwidth is more than 512Kbps, you can fix the bit rate according to your bandwidth and set the maximum frame rate to 30 fps. If the images vary dramatically in your environment, you may want to slow the maximum frame rate down to 20 fps in order to lower the rate of data transmission. This allows for better video quality and the human eyes cannot readily detect the differences between those of 20, 25, or 30 frames per second. If your network bandwidth is below 512 Kbps, set the "Fix bit rate" according to your bandwidth and try to get the best performance by fine-tuning with the "Maximum frame rate". In a slow network, greater frame rate results in blur images. Another work-around is to choose "160x120" in the "Size" option for better images. Video quality performance will vary somewhat due to the number of users viewing on the network; even when the parameters have initially been finely tuned. Performance will also suffer due to poor connectivity because of the network's burst constraint.


Only Quality Images Will Do

To have the best video quality, you should set "Fix quality" at "Detailed" or "Excellent" and adjust the "Maximum frame rate" to match your network's bandwidth. If your network is slow and you receive "broken" pictures, go to the TCP protocol in "Connection type" and choose a more appropriate mode of transmission. The images may suffer a time delay due to a slower connection. The delay will also increase with added number of users.

Somewhere Between Real-time and Clear Images

If you have a broadband network, set "Fix quality" at "Normal" or better, rather than setting "Fix bit rate". You can also fix the bandwidth according to your actual network speed and adjust the frame rate. Start from 30 fps down for best results but not below 15 fps. If the image qualities are not improved, select a lower bandwidth setting.

Opening accounts for new users

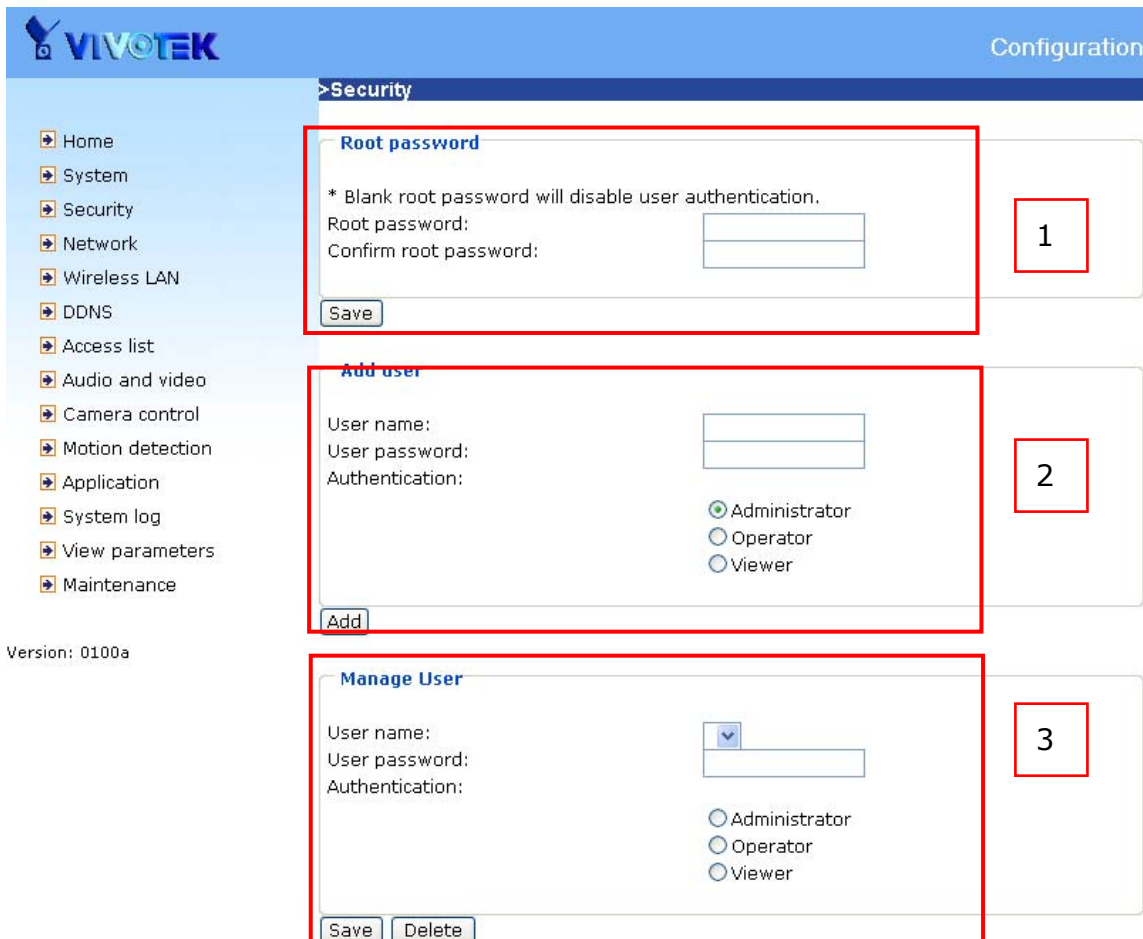

Configuration

>Security

Home
System
Security
Network
Wireless LAN
DDNS
Access list
Audio and video
Camera control
Motion detection
Application
System log
View parameters
Maintenance

Version: 0100a

Root password

* Blank root password will disable user authentication.

Root password:

Confirm root password:

Save

Add user

User name:

User password:

Authentication:

☒ Administrator
☐ Operator
☐ Viewer

Add

Manage User

User name:

User password:

Authentication:

☐ Administrator
☐ Operator
☐ Viewer

Save Delete

1

2

3

Protect Network Camera by passwords

The Network Camera is shipped without any password by default. That means everyone can access the Network Camera including the configuration as long as the IP address is known. It is necessary to assign a password if the Network Camera is intended to be accessed by others. Type a new word twice in ① to enable protection. This password is used to identify the administrator. Then add an account with user name and password for your friends in ②. Network Camera can provide twenty accounts for your valuable customers or friends. You may delete some users from ③.

Build a security application

The Administrator can use the built-in motion detection to monitor any movement to perform many useful security applications. To upload the snapshots, users can choose either email or FTP according to user's needs. Both e-mail and FTP use the network settings on the Email and FTP page. Refer to the definition section for detail configuration.

1. Click on "**Configuration**" on homepage,
2. Click on "**Motion detection**" at the left column,
3. Check "Enable motion detection",
4. Click on new to have a new window to monitor video,
5. Type in a name to identify the new window,
6. Use the mouse to click, hold, and drag the window corner to resize or the title bar to move,
7. Fine-tune using the "Sensitivity" and "Percentage" fields to best suit the camera's environment. Higher "Sensitivity" detects the slighter motion. Higher "Percentage" discriminates smaller objects,
8. Clicking on "Save" enables the activity display. Green means the motion in the window is under the watermark set by Administrator and red means it is over the watermark,
9. Click on "**Application**" at the left column,
10. Check the weekdays as you need and give the time interval to monitor the motion detection every day,
11. Select the Trigger on Motion detection.
12. Set the **delay before detecting next motion** to avoid continuous false alarms following the original event,
13. Set the number of pre-event and post-event images to be uploaded,
14. Check the window name set in step 5,
15. Check the way to upload snapshot,

Click on save to validate.

Software revision upgrade

Customers can obtain the up-to-date software from the web site of Vivotek. An easy-to-use Upgrade Wizard is provided to upgrade the Network Camera with just a few clicks. The upgrade function is opened to the Administrator only. To upgrade the system, follow the procedures below.


1. Download the firmware file named "xxx.pkg" from the appropriate product folder.
2. Run the Upgrade Wizard and proceed following the prompts. Refer to the instructions of the Upgrade Wizard for details.
3. Or upgrade firmware from HTTP web page directly
3. The whole process will finish in a few minutes and it will automatically restart the system.



If power fails during the writing process of Flash memory, the program in the memory of the Network Camera may be destroyed permanently. If the Network Camera cannot restart properly, ask your dealer for technical service.

Definitions in Configuration

Only the Administrator can access system configuration. Each category in the left column will be explained in the following pages. The bold texts are the specific phrases on the Option pages. The Administrator may type the URL below the figure to directly enter the frame page of configuration. If the Administrator also wants to set certain options through the URL, read the reference appendix for details.

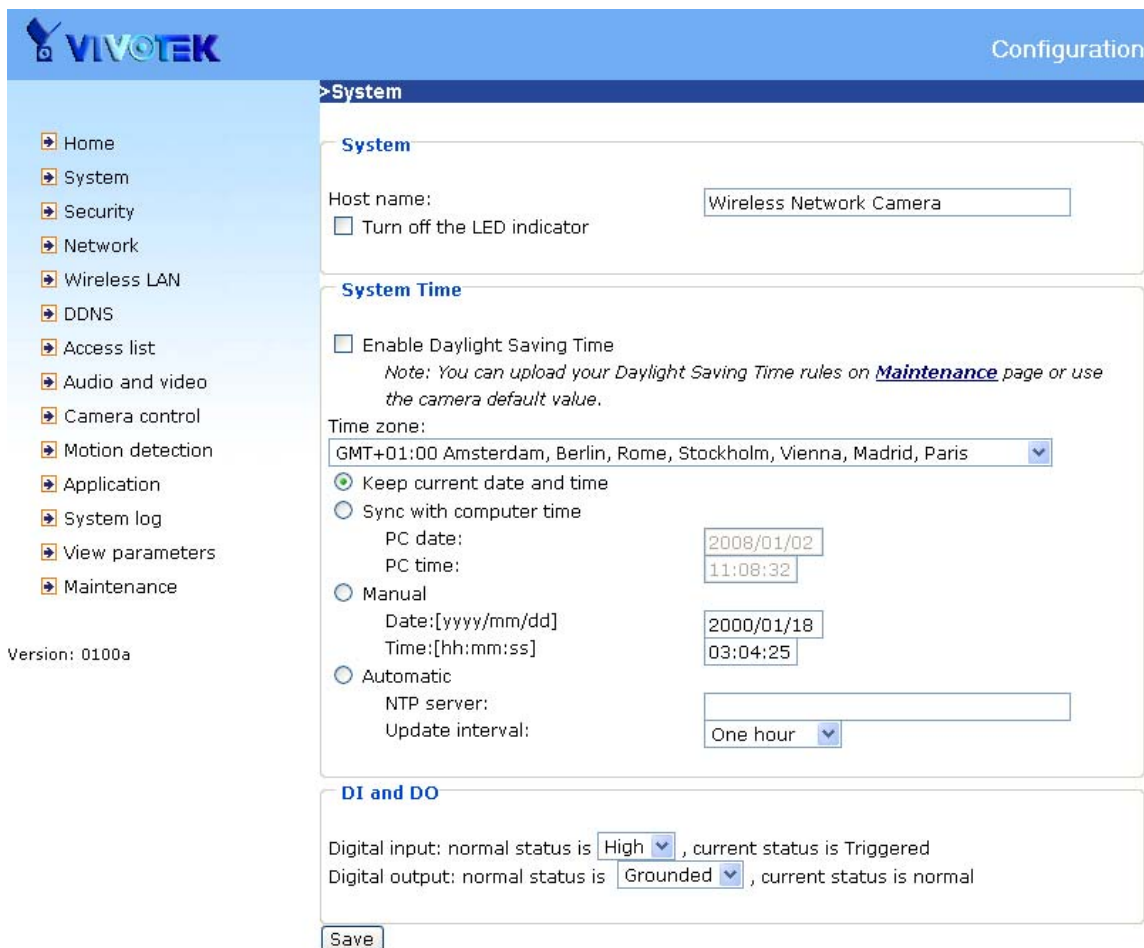

The screenshot shows the VIVOTEK Configuration interface. On the left is a navigation menu with options: Home, System, Security, Network, Wireless LAN, DDNS, Access list, Audio and video, Camera control, Motion detection, Application, System log, View parameters, and Maintenance. The main content area is titled 'Configuration' and contains three sections: 'System', 'System Time', and 'DI and DO'. The 'System' section includes a 'Host name' field set to 'Wireless Network Camera' and a checkbox for 'Turn off the LED indicator'. The 'System Time' section has a checkbox for 'Enable Daylight Saving Time' with a note about uploading rules on the Maintenance page. It also features a 'Time zone' dropdown menu set to 'GMT+01:00 Amsterdam, Berlin, Rome, Stockholm, Vienna, Madrid, Paris'. There are three radio buttons for time synchronization: 'Keep current date and time' (selected), 'Sync with computer time', and 'Manual'. The 'Manual' option includes fields for 'Date' (2000/01/18) and 'Time' (03:04:25). The 'Automatic' option includes an 'NTP server' field and an 'Update interval' dropdown set to 'One hour'. The 'DI and DO' section shows 'Digital input: normal status is High' and 'current status is Triggered', and 'Digital output: normal status is Grounded' and 'current status is normal'. A 'Save' button is at the bottom.

Version: 0100a

<url> http://<Network Camera>/setup/config.html

<Network Camera> is the domain name or original IP address of the Network

Camera.

<url> http://<Network Camera>/setup/system.html

<Network Camera> is the domain name or original IP address of the Network Camera.

System parameters

"Host name" The text displays the title at the top of the main page.

"Turn off the LED indicator" Check this option to shut off the LED on the rear. It can prevent the camera's operation being noticed.

"Enable Daylight Saving Time" Check this option to enable daylight saving time.

"Time zone" Adjust the time with that of the time-servers for local settings.

"Keep current date and time" Click on this to reserve the current date and time of the Network Camera. An internal real-time clock maintains the date and time even when the power of the system is turned off.

"Sync with computer time" Synchronizes the date and time of the Network Camera with the local computer. The read-only date and time of the PC is displayed as updated.

"Manual" Adjust the date and time according to what is entered by the Administrator. Notice the format in the related fields while doing the entry.


"Automatic" Synchronize with the NTP server over the Internet whenever the Network Camera starts up. It will fail if the assigned time-server cannot be reached.

"NTP server" Assign the IP address or domain name of the time-server. Leaving the text box blank connects the Network Camera to the default time-servers.

"Update interval" Select hourly, daily, weekly, or monthly update with the time on the NTP server.

"Digital input" Select High or Low to define normal status of the digital input. The current status is shown, too.

"Digital output" Select Grounded or Open to define normal status of the digital output. The current status is shown, too.


Remember to click on  to immediately validate the changes. Otherwise, the correct time will not be synchronized.

Security settings

“Root password” Change the Administrator’s password by typing in the new password identically in both text boxes. The typed entries will be displayed as asterisks for security purposes. After pressing **Save**, the web browser will ask the Administrator for the new password for access.

“Add user” Type the new user's name and password and press **Add** to insert the new entry. The new user will be displayed in the user name list. There is a maximum of twenty user accounts.

“Manager user” Pull down the user list to find the user’s name and press **Delete** to complete.

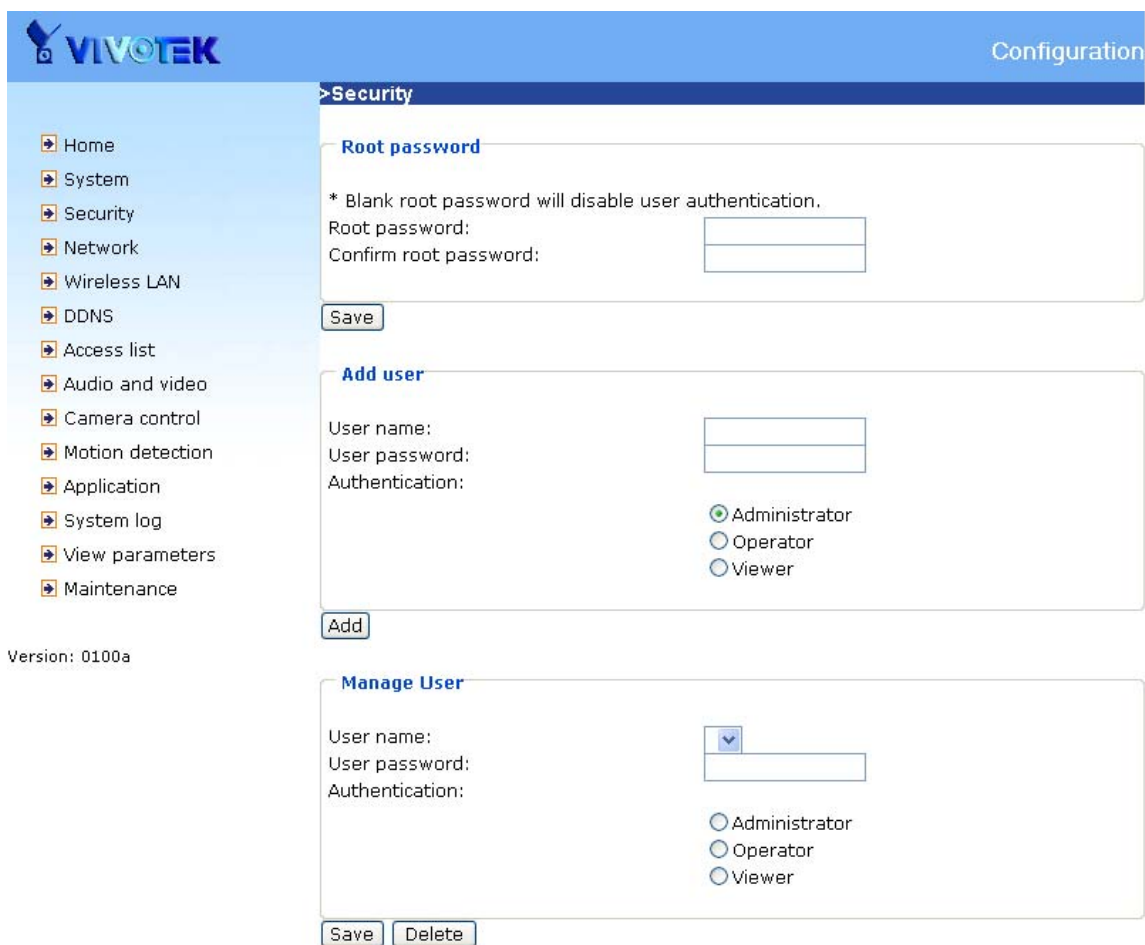

The screenshot shows the VIVOTEK Configuration page with the Security settings section expanded. The left sidebar contains a menu with options: Home, System, Security, Network, Wireless LAN, DDNS, Access list, Audio and video, Camera control, Motion detection, Application, System log, View parameters, and Maintenance. The main content area is titled "Security" and contains three sections: "Root password", "Add user", and "Manage User".

Root password

* Blank root password will disable user authentication.

Root password:

Confirm root password:

Save

Add user

User name:

User password:

Authentication:

☒ Administrator

☐ Operator

☐ Viewer

Add

Manage User

User name:

User password:

Authentication:

☐ Administrator

☐ Operator

☐ Viewer

Save **Delete**

Version: 0100a

<url> http://<Network Camera>/setup/security.html

<Network Camera> is the domain name or original IP address of the Network Camera.

Network settings

Any changes made on this page will restart the system in order to validate the changes. Make sure every field is entered correctly before clicking on .

Network type

"LAN" & "PPPoE"

The default type is LAN. Select PPPoE if using ADSL

"Get IP address automatically" & "Use fixed IP address"

The default status is **"Get IP address automatically"**. This can be tedious having to perform software installation whenever the Network Camera starts. Therefore, once the network settings, especially the IP address, have been entered correctly, select **"Use fixed IP address"** then the Network Camera will skip installation at the next boot. The Network Camera can automatically restart and operate normally after a power outage. Users can run IP installer to check the IP address assigned to the Network Camera if the IP address is forgotten or using the UPnP function provided by the Network Camera (MS Windows XP provides UPnP function at **My Network Place**). **"IP address"** This is necessary for network identification.

"Subnet mask" This is used to determine if the destination is in the same subnet. The default value is "255.255.255.0".

"Default router" This is the gateway used to forward frames to destinations in a different subnet. Invalid router setting will fail the transmission to destinations in different subnet.

"Primary DNS" The primary domain name server that translates hostnames into IP addresses.

"Secondary DNS" Secondary domain name server that backups the Primary DNS.

"Enable UPnP presentation" Enable the UPnP camera short cut

"Enable UPnP port forwarding" Enable uPnP port forwarding

"PPPoE" If using the PPPoE interface , fill the following settings from ISP

"User name" The login name of PPPoE account

"Password" The password of PPPoE account

"Confirm password" Input password again for confirmation

HTTP

"Http port" This can be other than the default Port 80. Once the port is changed, the users must be notified the change for the connection to be successful. For instance, when the Administrator changes the HTTP port of the Network Camera whose IP address is 192.168.0.100 from 80 to 8080, the users must type in the web browser "http://192.168.0.100:8080" instead of "http://192.168.0.100".

RTSP Streaming

"Enable RTSP authentication" Enable the RTSP authentication.

"Access name" This is the access URL for making connection from client software. Using rtsp://<ip address>/<access name> to make connection

"RTSP port" This can be other than the default Port 554

"RTP port for video" This can be other than the default port 5558. It must be an even number.

"RTCP port for video" This port must be RTP port for video plus 1.

"RTP port for audio" This can be other than the default port 5556. It must be an even number.

"RTCP port for audio" This port must be RTP port for audio plus 1.

"Enable multicast" This option turns on the multicast, bandwidth-conserving technology.

"Multicast group address" It specifies an arbitrary group of IP hosts that have joined the group and want to receive traffic sent to this group.


"Multicast video port" This can be other than the default port 5560. It must be an even number.

"Multicast rtcp video port" This port must be multicast video port plus 1.

"Multicast audio port" This can be other than the default port 5562. It must be an even number.

“Multicast rtcp audio port” This port must be multicast audio port plus 1.

“Multicast TTL” This option indicates the Time-To-Live of multicast packets.


Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

> Network

Network type

☒ LAN

☒ Get IP address automatically
☐ Use fixed IP address

IP address

192.168.5.125

Subnet mask

255.255.255.0

Default router

192.168.5.1

Primary DNS

192.168.0.10

Secondary DNS

192.168.0.20

☒ Enable UPnP presentation
☐ Enable UPnP port forwarding

☐ PPPoE

User name

Password

Confirm password

HTTP

Authentication:

basic

HTTP port

80

Secondary HTTP port

8080

Access name for stream 1

video.mjpg

Access name for stream 2

video2.mjpg

FTP

FTP port

21

RTSP streaming

Authentication:

disable

Access name for stream 1

live.sdp

Access name for stream 2

live2.sdp

RTSP port

554

RTP port for video

5556

RTCP port for video

5557

RTP port for audio

5558

RTCP port for audio

5559

Multicast settings for stream 1

☐ Always multicast

Multicast group address

239.128.1.99

Multicast video port

5560

Multicast RTCP video port

5561

Multicast audio port

5562

Multicast RTCP audio port

5563

Multicast TTL [1~255]

15

Multicast settings for stream 2

☐ Always multicast

Multicast group address

239.128.1.100

Multicast video port

5564

Multicast RTCP video port

5565

Multicast audio port

5566

Multicast RTCP audio port

5567

Multicast TTL [1~255]

15

Version: 0100a

<url> *http://<Network Camera>/setup/network.html*

<Network Camera> is the domain name or original IP address of the Network Camera.

WLAN Configuration (TC5633 only)

“SSID” (Service Set Identifier), it is a name that identifies a wireless network. Access Points and wireless clients attempting to connect to a specific WLAN (Wireless Local Area Network) must use the same SSID. The default setting is **default**. *Note: The maximum length of SSID is 32 single-byte characters and SSID can't be any of “, <, > and space character.*

“Wireless mode” Clicking on the pull-down menu to select from the following options:

- ▶ **“Infrastructure”** Make the Network Camera connect to the WLAN via an Access Point. (The default setting)

- ▶ **“Ad-Hoc”** Make the Network Camera connect directly to a host equipped with a wireless adapter in a peer-to-peer environment.

“Channel” While in infrastructure mode, the channel is selected automatically to match the channel setting for the selected Access Point. In Ad-Hoc mode, the channel must be manually set to the same channel for each wireless adapter. The default channel setting depends on the installed region.

“TX rate” This field is for selecting the maximum transmission rate on the network. The default setting is “auto”, that is the Network Camera will try to connect to the other wireless device with highest transmitting rate.

“Security” Select the data encrypt method

- ▶ **“None”** – No data encryption.

- ▶ **“WEP”** – allows communication only with other devices with identical WEP settings.

- ▶ **“WPA-PSK”** – Use WPA pre-shared key.

“Auth Mode” Choosing one of the following modes, (Open is the default setting).

- ▶ **“Open”** – communicates the key across the network.

- ▶ **“Shared”** – allows communication only with other devices with identical WEP settings.

“Key length” The administrator can select the key length among 64 or 128 bits.

64bits is the default setting.

"Key format" Hexadecimal or ASCII. **"HEX"** is the default setting.

- ▶ **"HEX"** digits consist of the numbers 0~9 and the letters A-F.
- ▶ **"ASCII"** is a code for representing English letters as numbers from 0-127 except **"**, **<**, **>** and space characters that are reserved.

"Network Key" Entering a key in either hexadecimal or ASCII format. When selecting different key length, acceptable input length is listed as following:

64 bits key length: 10 Hex digits or 5 characters.


128 bites key length: 26 Hex digits or 13 characters.


Note: When 22(**"**), 3C(**<**) or 3E(**>**) are input in network key, the key format can't be changed to ASCII format.

"Algorithm" Choosing one of the following algorithm for WPA-PSK modes

- ▶ **"TKIP"**
- ▶ **"AES"**

"Pre-shared Key" Entering a key in ASCII format. The length of the key is 8 ~ 63

 Some invalid settings may cause the system failing to respond. Change the configuration only if necessary and consult with your network supervisor or experienced users for correct settings. Once the system has lost contact, refer to Appendix A for reset and restore procedures.

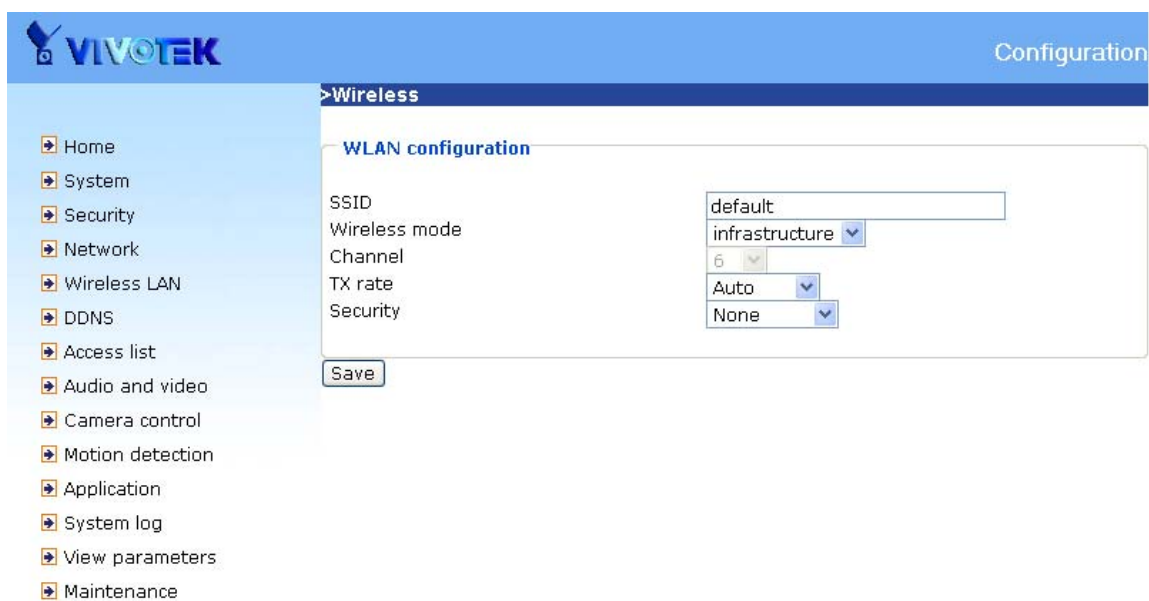

The screenshot shows the VIVOTEK Configuration interface. On the left is a navigation menu with options: Home, System, Security, Network, Wireless LAN, DDNS, Access list, Audio and video, Camera control, Motion detection, Application, System log, View parameters, and Maintenance. The 'Wireless' section is selected, showing 'WLAN configuration' settings. The settings include: SSID (text field with 'default'), Wireless mode (dropdown menu with 'infrastructure' selected), Channel (dropdown menu with '6' selected), TX rate (dropdown menu with 'Auto' selected), and Security (dropdown menu with 'None' selected). A 'Save' button is located below the settings.

Version: 0100a

<url> *http://<Network Camera>/setup/wireless.html*

<Network Camera> is the domain name or original IP address of the Network Camera.

DDNS

“Enable DDNS” This option turns on the DDNS function.


“Provider” The provider list contains four hosts that provide DDNS services. Please connect to the service provider’s website to make sure the service charges.

“Host Name” If the User wants to use DDNS service, this field must be filled. Please input the hostname that is registered in the DDNS server.

“Username/E-mail” The Username or E-mail field is necessary for logging in the DDNS server or notify the User of the new IP address. Note: when this field is input as “Username” the following field must be input as “Password”.

“Password/Key” Please input the password or key to get the DDNS service.

“Save” Click on this button to save current settings for the DDNS service and UPnP function.

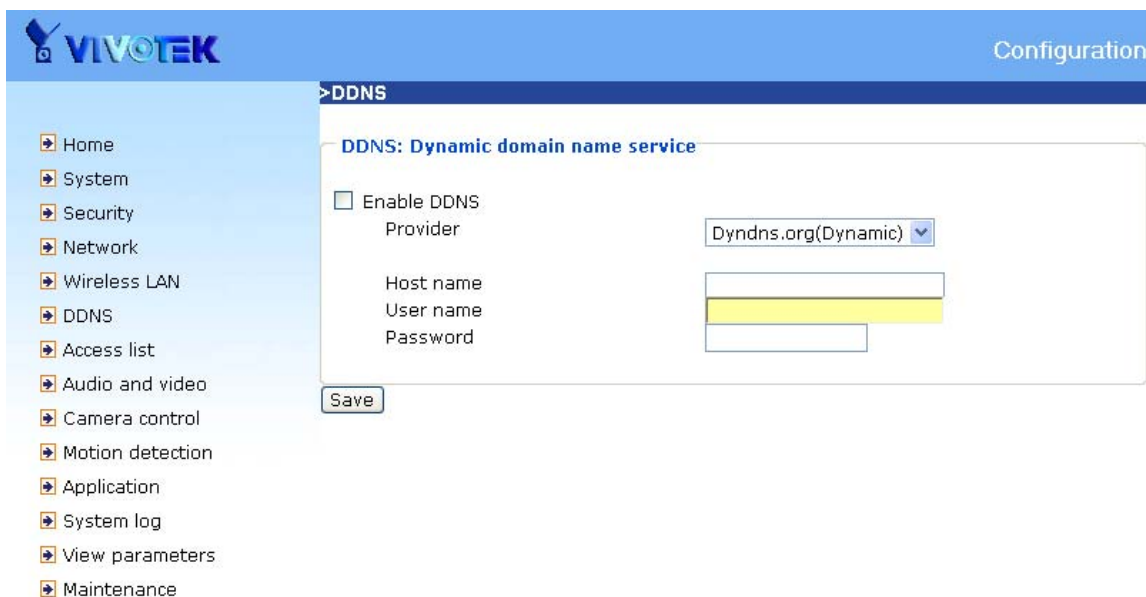

The screenshot shows the VIVOTEK Configuration interface. On the left is a navigation menu with options: Home, System, Security, Network, Wireless LAN, DDNS, Access list, Audio and video, Camera control, Motion detection, Application, System log, View parameters, and Maintenance. The 'DDNS' option is selected. The main content area is titled 'DDNS: Dynamic domain name service'. It contains a checkbox for 'Enable DDNS', a 'Provider' dropdown menu set to 'Dyndns.org(Dynamic)', and three input fields for 'Host name', 'User name', and 'Password'. A 'Save' button is located at the bottom left of the configuration area.

Version: 0100a

<url> <http://<Network Camera>/setup/ddns.html>

<Network Camera> is the domain name or original IP address of the Network Camera.


Access List

The access list is to control the access permission of clients by checking the client IP address.

There are two lists for permission control: **Allow List** and **Deny List**. Only those clients whose IP address is in the **Allow List** and not in the **Deny List** can connect to the Video Server or Network Camera for receiving the audio/video streaming.

Both **Allow List** and **Deny List** consist of a list of IP ranges. If you want to add a new IP address range, type the **Start IP Address** and **End IP Address** in the text boxes and click on the **Add** button. If you want to remove an existing IP address range, just select from the pull-down menu and click on the **Delete** button.

Both the Allow List and Deny List can have 20 entries.


Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Access list

Allowed list

Start IP address

End IP address

Delete allowed list

Allowed list 1.0.0.0 ~ 255.255.255.255 ▼

Denied list

Start IP address

End IP address

Delete denied list

Denied list ▼

Version: 0100a

<url> http://<Network Camera>/setup/accesslist.html

<Network Camera> is the domain name or original IP address of the Network Camera.

Audio and Video

Video Settings

"Video title" The text string can be displayed on video

"Color" Select either for color or monochrome video display.

"Power line frequency (for fluorescent light)", the fluorescent light will flash according to the power line frequency that depends on local utility. Change the frequency setting to eliminate uncomfortable flash image when the light source is only fluorescent light.

Video orientation

"Flip" Vertically rotate the video.


"Mirror" Horizontally rotate the video. Check options both if the Network Camera is installed upside down.

"Maximum Exposure Time" Adjust the maximum exposure time in different environment.

"Overlay title and time stamp on video" Check it the title is shown on video.

Image Settings

This session shows how to tune **"Brightness"**, **"Contrast"**, **"Saturation"**, **"Sharpness"** and **"White balance"** for video compensation.

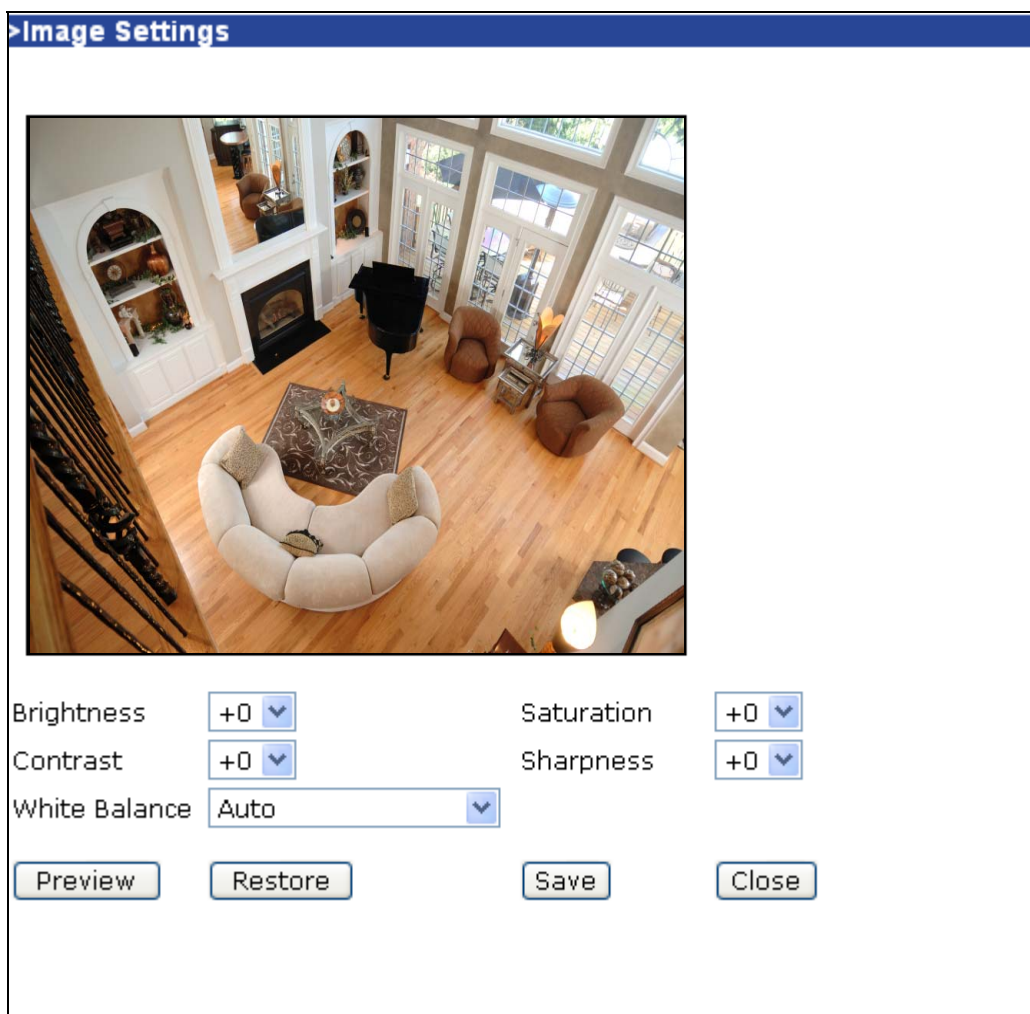

Brightness

Adjust the image brightness in 11 steps from +5 ~ -5. The default value is set to 0.

Contrast

Adjust the image contrast in 11 steps from +5 ~ -5. The default value is set to 0.

Saturation

Adjust the image color saturation in 7 steps from +1 ~ -5. The default value is set to 0.

Sharpness

Adjust the image sharpness in 7 steps from +3 ~ -3. The default value is set to + 3.

White balance

- **Auto**

The camera automatically adjusts the color temperature of light in response to different light sources. The white balance setting defaults to Auto and works well in most situations.

- **Keep current value**

Manually set the white balance to compensate for the ambient lighting conditions.

Step1: Set the White balance to **Auto**.

Step2: Place a sheet of white paper in front of the camera lens; then allow the camera to adjust the color temperature automatically.

Step3: Select **Keep current value** to confirm the setting while the white balance is being measured.

Step4: Click **Save** button to save the current value.

To preview the effects, click **Preview**. Upon confirmation, click **Save** to save the settings and click **Close** to quit the image settings window. Clicking **Restore** returns to original settings without incorporating the changes.

"Mode" It can be MPEG-4 or JPEG. If MPEG-4 is selected, it is streamed in RTSP protocol. If JPEG is selected, it is streamed in server push mode.

"Frame Size" Both MPEG-4 and JPEG video mode have three options to choose: **"176x144"**, **"320x240"** and **"640x480"**.

There are three dependent parameters provided for video performance adjustment.

"key frame interval"


"Max frame rate" This limits the maximal refresh frame rate, which can be combined with the **"Video quality"** to optimize bandwidth utilization and video quality. Choose **"Constant bit rate"** If the user wants to fix the bandwidth utilization regardless of the video quality or choose **"Fixed quality"** and select the desired bandwidth. The video quality may be poor due to the sending of maximal frame rate within the limited bandwidth when images are moving rapidly. Consequently, to ensure detailed video quality (quantization rate) regardless of the network, it will utilize more bandwidth to send the maximal frames when images change drastically.

Audio settings

"Mute" To turn off audio

"Internal microphone input gain" Modify the gain of the internal audio input

"Audio type" Select audio codec **"AAC"** or **"GSM-AMR"** and the bit rate


Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Audio and video

Video settings

Video title:

Color: Color

Power line frequency: 60 Hz

Video orientation: ☐ Flip ☐ Mirror

Maximum Exposure Time: Auto

☐ Overlay title and time stamp on video and snapshot.

Image Settings

Video quality settings for stream 1

Mode: MPEG-4

Frame size: 320x240

Maximum frame rate: 30 fps

Intra frame period: 1 S

Video quality

☐ Constant bit rate: 512 Kbps

☒ Fixed quality: Good

Video quality settings for stream 2

Mode: JPEG

Frame size: 320x240

Maximum frame rate: 30 fps

Video quality: Good

Audio Settings

☐ Mute

Internal microphone input gain: +3 dB

Audio type: ☐ AAC ☒ GSM-AMR

AAC bit rate: 128 Kbps


GSM-AMR bit rate: 12.2 Kbps

Save

<url> <http://<Network Camera>/setup/audiovideo.html>

<Network Camera> is the domain name or original IP address of the Network Camera.

Camera Control

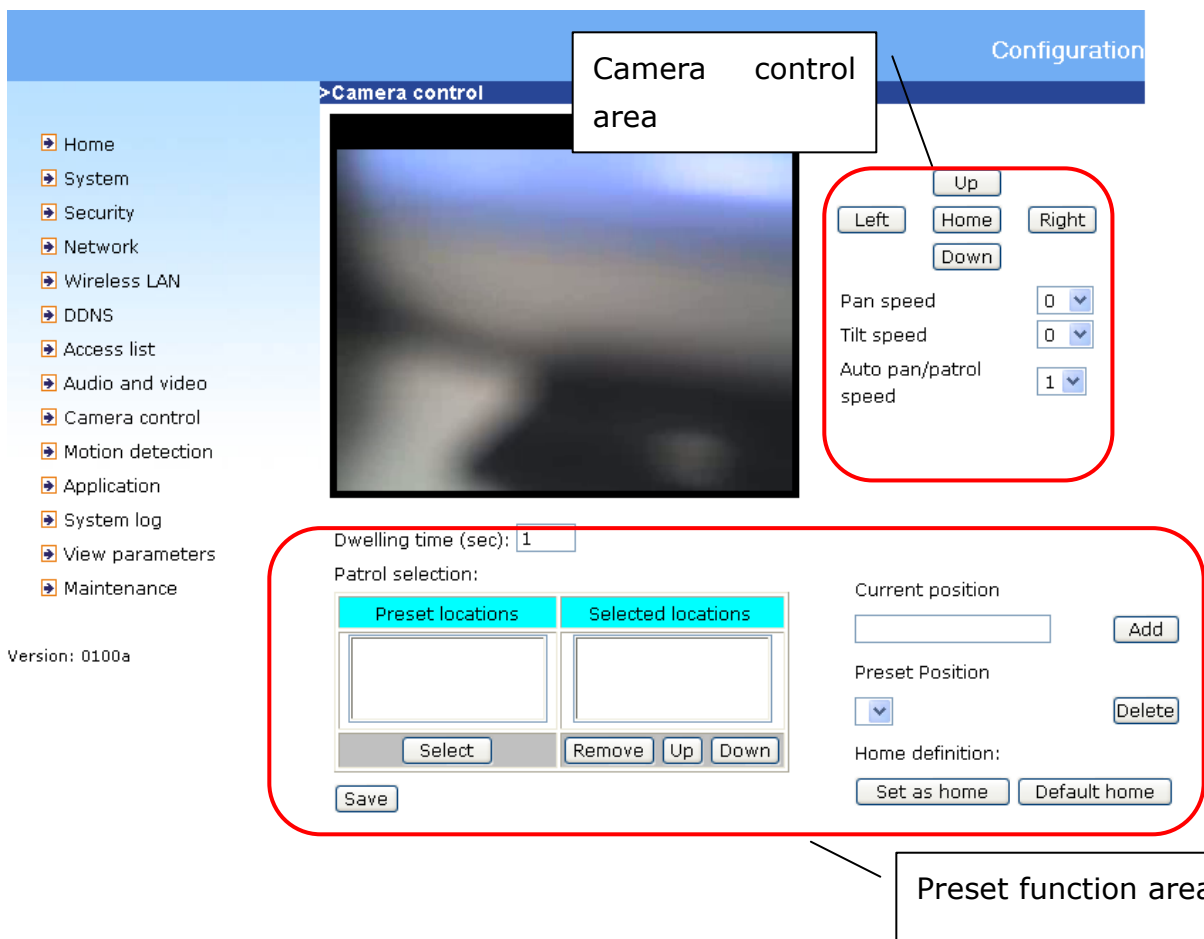

On the Camera Control page, there are two main function control areas:

Camera control area

The pan and tilt functions can be controlled with these buttons. The "Left" button aims the camera to the left; the "Right", "Up", and "Down" buttons aim the camera accordingly. The "Home" button aims the camera to the center.

"Pan speed" This controls the range of the horizontal movement of the camera. The greater the value, the greater angular movement when performing the "Left" or "Right" functions.

"Tilt speed" This controls the range of the vertical movement of the camera. The

greater the value, the greater angular movement when performing the "Up" or "Down" functions would be.

"Auto pan/patrol speed" This defines the speed of panning and patrol, the greater the value, the faster the speed.

Preset function area

"Current position", If the User wants to save the current view as a preset location, enter a name for each of the current video view at "current position" and click on the "Add" button. The camera allows for 20 preset locations.

"Preset position" This keeps a list for preset positions. Clicking on the "Delete" button will remove the current selected position from the preset list.

"Set as home" Click on the button will set the current aimed position as home of the Network Camera. Each time the Network Camera reboots or after calibration, it will automatically aim to the defined home position.

"Default home" Restore home position to factory default home by clicking on this button.

"Dwelling time" The value set here specifies:

1. The stop time of each preset location during auto patrol of the Network Camera.
2. The stay time at the most left and the most right positions when the Network Camera is doing auto panning.

"Patrol selection", After the User has saved a list of preset positions, the "Preset locations" box will also keep a list of the preset positions. And once the "Select>" button is clicked, the "Selected location" box will keep a list of the patrol stops. The "Remove" button removes the preset position from the patrol stops. The "UP", "DOWN" buttons adjust the order of the patrol stops. Several preset positions can be added to the patrol stops. The camera can accept up to 40 patrol stops.

"Save" button

The button is valid for "Auto pan/patrol speed", "Enable IR control", "Dwelling time" and "Patrol selections". In other words, after changing these settings, and the "Save" button is not clicked, the new setting of the camera will not take effect.

Motion detection

"Enable motion detection" Check this option to turn on motion detection.

New Click on this button to add a new window. At most three windows can exist simultaneously. Use the mouse to click, hold, and drag the window frame to resize or the title bar to move. Clicking on the 'x' at the upper right-hand corner of the window to delete the window. Remember to save in order to validate the changes.

Save Click on this button to save the related window settings. A graphic bar will rise or fall depending on the image variation. A green bar means the image variation is under monitoring level and a red bar means the image variation is over monitoring level. When the bar goes red, the detected window will also be outlined in red. Going back to the homepage, the monitored window is hidden but the red frame shows when motion is detected.

"Window Name" The text will show at the top of the window.

"Sensitivity" This sets the endurable difference between two sequential images.


"Percentage" This sets the space ratio of moving objects in the monitoring window. Higher sensitivity and small percentage will allow easier motion detection.

The following figure shows the screen when **Save** is clicked. The monitoring window has been outlined in red and the graphic bar goes red since the goldfish is moving.

>Motion detection

☒ Enable motion detection

2007/12/05 20:26:49



Window Name
motion

Sensitivity
82%

Percentage
14%

New Save

Application


There are three sections in application page. They are event, server and media. Click **Add** to pop a window to add a new item of event, server or media. Click **Delete** to delete the selected item from event, server or media. Click on the item name to pop a window to edit it.

There can be at most three events. There can be at most five server and five media configurations.

User can know the event name, status, weekly and time schedule and trigger type in event section. The server name, type and address/location are shown in server section.

The current media free space, media name and type are shown in media section. After adding a new media, the value of free space will be updated. User cannot add media which size is larger than free space.

Suggest to set server and media first before setting event. The servers and medias selected in event list are not modified or deleted. Please remove them first from the event if you want to delete or modify them. Recommend that using different media in different event to make use all media be produced and received correctly. If using the same media in different events and the events trigger almost simultaneously, the servers in the second triggered event will not receive any media; there would be only notifications.


Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Application

Event

Name	Status	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Time	Trigger
<div style="display: flex; justify-content: space-between;"> Add ▼ Delete </div>										

Server

Name	Type	Address/Location
<div style="display: flex; justify-content: space-between;"> Add ▼ Delete </div>		

Media

Media freespace: 2800KB

Name	Type
<div style="display: flex; justify-content: space-between;"> Add ▼ Delete </div>	

Version: 0100a

<url> <http://<Network Camera>/setup/application.htm>

<Network Camera> is the domain name or original IP address of the Network Camera.

Event

"Event name" The unique name for event

"Enable this event" Check it to enable this event.

"Priority" The event with higher priority will be executed first.

"Delay second(s) before detecting next event" The delay to check next event. It is used in motion detection and digital input trigger type.

There are four kinds of trigger supported.

"Video motion detection" Select the windows which need to be monitored.

"Periodic" The event is triggered in specified intervals. The unit of trigger interval is minute.

"Digital input" To monitor digital input

"System boot" The event is triggered when the system bootup.

The weekly and time schedules are provided.

"Sun" ~ "Sat" Select the days of the week to perform the event.

"Time" show **"Always"** or input the time interval.

"Trigger DO" Check it to trigger digital output for specific seconds when event is triggered.

"Server name" Check it to sending the selected media when event is triggered.

>Event Settings

Event name:

☐ Enable this event

Priority: Normal

Detect next event after seconds before detecting next event [For motion detection]

Trigger

☐ Video motion detection
Detect motion in window ☐ motion
Note: Please configure [Motion detection](#) first

☐ Periodically
Trigger every other minutes

☐ Digital input

☒ System boot

Event Schedule

☒ Sun ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat

Time

☒ Always

☐ From to [hh:mm]

Action

☐ Trigger digital output for seconds

Server

"Server name" The unique name for server

There are four kinds of servers supported. They are email server, FTP server and HTTP server.

Here is setting for email server.

"Sender email address" The email address of the sender

"Recipient email address" The email address of the recipient

"Server address" The domain name or IP address of the external email server.

"User name" This granted user name on the external email server.

"Password" This granted password on the external email server.

Here is setting for FTP server.

"Server address" The domain name or IP address of the external FTP server.

"Server port" This can be other than the default port 21. The user can change this value from 1025 to 65535.

"User name" This granted user name on the external FTP server.

"Password" This granted password on the external FTP server.

"Remote folder name" Granted folder on the external FTP server. The string must conform to that of the external FTP server. Some FTP servers cannot accept preceding slash symbol before the path without virtual path mapping. Refer to the instructions for the external FTP server for details. The folder privilege must be open for upload.

 
"Passive Mode" Check it to enable passive mode in transmission.

Here is setting for HTTP server.

"URL" The URL to upload the media.

"User name" This granted user name on the external HTTP server.

"Password" This granted password on the external HTTP server.

After input the setting of server, user can click on  to test whether the setting is correct. The testing result will be shown in a pop-up window.

>Server Settings

Server name:

Server Type

☒ **Email**

Sender email address

Recipient email address

Server address

User name

Password

☐ **FTP**

Server address

Server port

User name

Password

FTP folder name

☒ **Passive mode**

☐ **HTTP**

URL

User name

Password

Media

"Media name" The unique name for media

There are three kinds of media. They are snapshot, video clip and system log.

Here is setting for snapshot.

"Source" The source of stream, stream1 or stream2.

"Send Pre-event images" The number of pre-event images

"Send Post-event images" The number of post-event images

"File name prefix" The prefix name will be added on the file name of the snapshot images.

"Add date and time suffix to file name" Check it to add timing information as file

name suffix.

Here is setting for video clip

"Source" The source of stream, stream1 or stream2.

"Pre-event recording" The interval of pre-event recording in seconds

There are two limitations for video clip file.

"Maximum duration" The maximal recording file duration in seconds

"Maximum file size" The maximal file size would be generated.

"File name prefix" The prefix name will be added on the file name of the video clip.

>Media Settings

Media name:

Media Type



Snapshot

Source:

Send pre-event image(s) [0~7]

Send post-event image(s) [0~7]

File name prefix:

☐ Add date and time suffix to file name



Video Clip

Source:

Pre-event recording: seconds [0~9]

Maximum duration: seconds [1~10]

Maximum file size: Kbytes [50~600]

File name prefix:



System log

Save


Close

System log

The Network camera support log the system messages on remote server. The protocol is compliant to RFC 3164. If you have external Linux server with syslogd service, use "-r" option to turn on the facility for receiving log from remote machine. Or you can use some software on Windows which is compliant to RFC 3164.

Check **"Enable remote log"** and input the **"IP address"** and **"port"** number of the log server to enable the remote log facility.

In the **"Current log"**, it displays the current system log file. The content of the log provides useful information about configuration and connection after system boot-up.

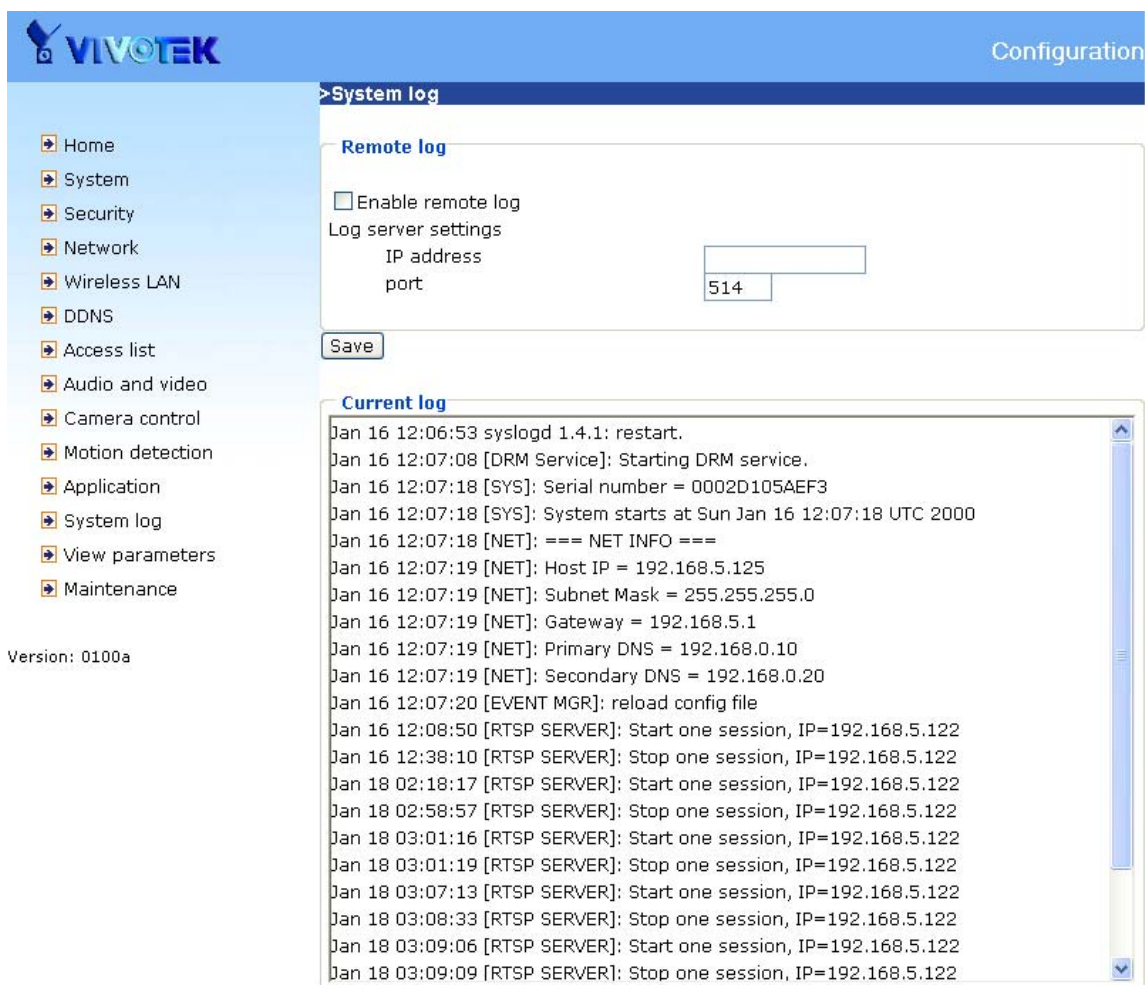


The screenshot shows the VIVOTEK Configuration web interface. On the left is a navigation menu with options: Home, System, Security, Network, Wireless LAN, DDNS, Access list, Audio and video, Camera control, Motion detection, Application, System log, View parameters, and Maintenance. The 'System log' option is selected. The main content area is titled 'Configuration' and has a sub-header '>System log'. Under this, there is a 'Remote log' section with a checkbox 'Enable remote log' (unchecked), a label 'Log server settings', and input fields for 'IP address' and 'port' (set to 514). A 'Save' button is below. The 'Current log' section displays a scrollable list of system events, including syslogd restart, DRM service start, system boot time, network configuration (IP, subnet, gateway, DNS), config file reload, and multiple RTSP server sessions.

Version: 0100a

Viewing system parameters

Click on this link on the configuration page to view the entire system's parameter set.
The content is the same as those in CONFIG.INI.

 Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

>Parameter list

Parameter list

```
system_hostname='Wireless Network Camera'
system_ledoff='0'
system_date='2000/01/18'
system_time='03:33:22'
system_datetime=''
system_ntp=''
system_timezoneindex='40'
system_daylight_enable='0'
system_daylight_dstactualmode='1'
system_daylight_dstrewindmode='0'
system_daylight_auto_begin_time='NONE'
system_daylight_auto_end_time='NONE'
system_privacy='0'
system_updateinterval='0'
system_info_modelname='TC5633'
system_info_serialnumber='0002D105AEF3'
system_info_firmwareversion='TC5633-VVTK-0100a'
system_info_language_count=''
system_info_language_i0=''
status_di_i0='1'
status_do_i0='0'
status_onlinenum_rtsp='0'
status_onlinenum_httppush='0'
di_i0_normalstate='high'
do_i0_normalstate='grounded'
network_type='lan'
network_resetip='1'
network_ipaddress='192.168.5.125'
network_subnet='255.255.255.0'
network_router='192.168.5.1'
```

Version: 0100a

Maintenance

Six actions can be selected.

“Reboot system” Click the reboot button to restart system

“Restore” Click it to restore all setting to factory default except setting in “Network type” in network page and/or Daylight Saving Time in system page.


“Upload” Click to upload daylight saving time rules to the camera server.

“Export Daylight Saving Time Configuration File” If you want to use the daylight saving time function for the first time, click to export daylight saving time rules in *.xml file format from the camera server. Make changes on *.xml file and then upload it to the camera.

“Calibrate”

Recalibrate the home position to the default center to recover the tolerance caused by some external forces. This function is the same as the **“Center”** button on the Remote Controller. Please note that there is no confirming message box after clicking on the **“Calibrate”** button, the Network Camera will calibrate immediately.

“Upgrade firmware” Select the firmware file and click upgrade button



Configuration

- Home
- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Camera control
- Motion detection
- Application
- System log
- View parameters
- Maintenance

>Maintenance

Reboot system

Reboot the system

Reboot

Restore

Restore all settings to factory default except settings in

☐ Network type ☐ Daylight Saving Time

Restore

Upload

Update Daylight Saving Time Rules

Upload

Export Daylight Saving Time Configuration File

Get Daylight Saving Time Configuration File.

Export

Calibrate

Recalibrate the home position to the default center to recover the tolerance caused by some external forces.

Calibrate

Upgrade firmware

Select firmware file

Upgrade

Version: 0100a

Appendix


A. Troubleshooting

Status LED

The following table lists the LED patterns in general.

Condition	LED color
Loading system after power on	Steady red
During booting procedure	Steady blue and red
After network is setup (system up)	Blink green every second
During the upgrade firmware process	Fast blink red
Enable audio	Slowly blink green

Reset and restore

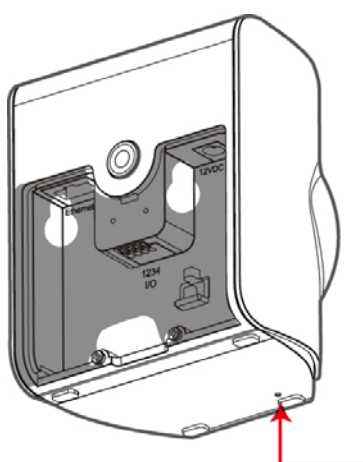

There is a button in the back side of the Network Camera. It is used to reset the system or restore the factory default settings.

RESET: Click on the button.

RESTORE:

1. Press on the button continuously.
2. Wait for all LED blink fast.
3. Free the button.



Restoring the factory defaults will erase any previous settings.

B. URL commands of the Network Camera

For some customers who already have their own web site or web control application, the Network Camera can be easily integrated through convenient URLs. This section lists the commands in URL format corresponding to the basic functions of the Network Camera.

Get server parameter values

Note: This request require administrator access

Method: GET/POST

Syntax:

```
http://<servername>/cgi-bin/admin/getparam.cgi?[<parameter>]
[&<parameter>...]
```

where the *<parameter>* should be *<group>[_<name>]* or *<group>[.<name>]* If you do not specify the any parameters, all the parameters on the server will be returned. If you specify only *<group>*, the parameters of related group will be returned.

When query parameter values, the current parameter value are returned.

Successful control requests returns parameter pairs as follows.

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/html\r\n
Context-Length: <length>\r\n
\r\n
<parameter pair>
```

where *<parameter pair>* is

<parameter>=<value>\r\n

[<parameter pair>]

<length> is the actual length of content.

Example: request IP address and it's response

Request:

http://192.168.0.123/cgi-bin/admin/getparam.cgi?network_ipaddress

Response:

HTTP/1.0 200 OK\r\n

Content-Type: text/html\r\n

Content-Length: 33\r\n

\r\n

network.ipaddress=192.168.0.123\r\n

Set server parameter values

Note: This request require administrator access

Method: GET/POST

Syntax:

http://<servername>/cgi-bin/admin/setparam.cgi?

[nosync= <value>&] <parameter> = <value>

[&<parameter> = <value>...][&return= <return page>]

parameter	value	description
<group>_<name>	value to assigned	Assign <value> to the parameter <group>_<name>..
return	<return page>	Redirect to the page <return page> after the parameter is assigned. The <return page> can be a

		<p>full URL path or relative path according the the current path. If you omit this parameter, it will redirect to an empty page.</p> <p>(note: The return page can be a general HTML file(.htm, .html) or a Vivotek server script executable (.vspx) file. It can not be a CGI command. It can not have any extra parameters. This parameter must be put at end of parameter list)</p>
--	--	--

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/html\r\n
Context-Length: <length>\r\n
\r\n
<parameter pair>
```

where <parameter pair> is

<parameter>=<value>\r\n

[<parameter pair>]

Only the parameters that you set and readable will be returned.

Example: Set the IP address of server to 192.168.0.123

Request:

http://myserver/cgi-bin/admin/setparam.cgi?Network_IPAddress=192.168.0.123

Response:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/html\r\n
Context-Length: 33\r\n
\r\n
```

```
network.ipaddress=192.168.0.123\r\n
```

Available parameters on the server

NOTE: The bold characters in table are the default value of each parameter.

Group: **System**

NAME	VALUE	DESCRIPTION
hostname (r/w)	<text string shorter than 40 characters>	host name of server << Wireless > Network Camera >
ledoff (r/w)	0	Do not turn off the led indicator
	1	Turn off the led indicator
date (r/w)	<yyyy/mm/dd>	year, month and date separated by slash.
	<keep>	keep date unchanged
	<auto>	Using NTP to sync date/time automatically
time (r/w)	<hh:mm:ss>	hour, minute and second separated by colon.
	<keep>	keep date unchanged
	<auto>	Using NTP to sync date/time automatically
ntp (r/w)	<domain name or IP address>	NTP server < skip to invoke default server >
timezone (r/w)	-12 ~ 12	time zone, 8 means GMT +8:00 < 8 >
updateinterval (r/w)	0 ~ 2592000	0 to Disable automatic time adjustment, otherwise, it means the seconds between NTP automatic update interval. < 0 >
serialnumber (r)	<mac address>	12 characters mac address without hyphen connected
firmwareversion (r)	<text string shorter than 39 characters>	The version of firmware, including model, company, and version number

restore (w)	0	Restore the system parameters to default value.
	Positive integer	Restore the system parameters to default value and restart the server after <value> seconds.
reset (w)	0 ~ 65535	Restart the server after <value> seconds.
	-1	Not restart the server.
viewmode (r/w)	0	Using the profile of viewing by computer
	1	Using the profile of viewing by mobile phone

Group: **Security**

NAME	VALUE	DESCRIPTION
username_<1~20> (r/w)	<text string shorter than 16 characters>	change user name. <blank>
userpass_<0~20> (r/w)	<text string shorter than 14 characters>	change user's password. The UserPass_0 is root's password. <blank>
userattr_<1~20> (r)	[conf]	show user's privilege. The privilege can be <blank> - only permit to view live media conf - Permit to change server's configuration <blank>
usercount (r)	1 ~ 21	The current account number on the server including root.<1>

Group: **Network**

NAME	VALUE	DESCRIPTION
type (r/w)	0	LAN
	1	PPPoE
pppoeuser	<text string shorter than	PPPoE account user name

(r/w)	80 characters>	<blank>
pppoepass (r/w)	<text string shorter than 15 characters>	PPPoE account password <blank>
resetip (r/w)(restart)	1	enable to get ipaddress, subnet, router, dns1, dns2 from DHCP server at next reboot
	0	Using preset ipaddress, subnet, router, dns1, dns2
ipaddress (r/w) (restart)	<IP address>	IP address of server <192.168.0.99>
subnet (r/w) (restart)	<IP address>	subnet mask <255.255.255.0>
router (r/w) (restart)	<IP address>	default gateway <blank>
dns1 (r/w) (restart)	<IP address>	primary DNS server <blank>
dns2 (r/w) (restart)	<IP address>	secondary DNS server <blank>
smtp1 (r/w)	<domain name or IP address, string shorter than 40 characters>	primary SMTP server <blank>
mailto1 (r/w)	<string shorter than 80 characters>	mail recipient address <blank>
mailuser1 (r/w)	<text string shorter than 63 characters>	User name of primary smtp server <blank>
mailpass1 (r/w)	<text string shorter than 15 characters>	Password of primary smtp server <blank>
smtp2 (r/w)	<domain name or IP address, string shorter than 40 characters>	secondary SMTP server <blank>
mailto2 (r/w)	<text string shorter than 80 characters>	mail recipient address <blank>
mailuser2	<text string shorter than	User name of secondary smtp server

(r/w)	63 characters>	<blank>
mailpass2 (r/w)	<text string shorter than 15 characters>	Password of secondary smtp server <blank>
returnemail (r/w)	<text string shorter than 80 characters>	return email address <blank>
localftpport (r/w)	<positive number less than 65535>	FTP port <21>
ftp1 (r/w)	<domain name or IP address, string shorter than 40 characters >	primary FTP server <blank>
ftpport1 (r/w)	<positive number less than 65535>	primary FTP port <21>
ftpuser1 (r/w)	<text string shorter than 63 characters>	user name for primary FTP server <blank>
ftppass1 (r/w)	<text string shorter than 15 characters>	password for primary FTP server <blank>
ftpfolder1 (r/w)	<text string shorter than 40 characters>	upload folder in primary FTP server <blank>
ftppasvmode1 (r/w)	1 0	Enable passive mode of primary FTP server Disable passive mode of primary FTP server
ftp2 (r/w)	<domain name or IP address, string shorter than 40 characters >	secondary FTP server
ftpport2 (r/w)	<positive number less than 65535>	secondary FTP port <21>
ftpuser2 (r/w)	<text string shorter than 63 characters>	user name for secondary FTP server <blank>
ftppass2 (r/w)	<text string shorter than 15 characters>	password for secondary FTP server <blank>
ftpfolder2 (r/w)	<text string shorter than 40 characters>	upload folder in secondary FTP server <blank>
ftppasvmode2	1	Enable passive mode of primary FTP server

(r/w)	0	Disable passive mode of primary FTP server
httpport (r/w) (restart)	<positive number less than 65535>	HTTP port < 80 >
rtspport (r/w) (restart)	<positive number less than 65535>	RTSP port < 554 >
videoport (r)	<positive number less than 65535>	video Channel port for RTP < 5558 >
audioport (r)	<positive number less than 65535>	audio Channel port for RTP < 5556 >
accessname (r/w)	<text string shorter than 20 characters>	RTSP access name < live.sdp >

Group: **Wireless (restart)**

ssid (r/w)	<text string shorter than 32 characters>	SSID for wireless lan settings < default >
wlmode (r/w)	0	Infrastructure mode
	1	Adhoc mode
txrate (r/w)	"NONE", "1M", "2M", "5.5M", "11M", "22M" for 802.11b+ "NONE", "1M", "2M", "5.5M", "11M", "6M", "9M", "12M", "18M", "24M", "36M", "48M", "54M", "Auto" for 802.11g	Transmit rate in Mbps < Auto >
encrypt (r/w)	0	None data encryption
	1	WEP data encryption
	2	WPA-PSK data encryption
authmode (r/w)	Open	Open mode
	Shared	Shared mode

keylength (r/w)	(64 , 128) for 802.11g	Key length in bits < 64 >
keyformat (r/w)	HEX	Key1 ~ Key4 will be represented in HEX format
	ASCII	Key1 ~ Key4 will be represented in ASCII format
keyselect (r/w)	1 ~ 4	Default key number < 1 >
key1 (r/w)	<text string shorter than 58 characters> (depends on keyformat & keylength)	WEP key1 for encryption < 0000000000 >
key2 (r/w)	<text string shorter than 58 characters> (depends on keyformat & keylength)	WEP key2 for encryption < 0000000000 >
key3 (r/w)	<text string shorter than 58 characters> (depends on keyformat & keylength)	WEP key3 for encryption < 0000000000 >
key4 (r/w)	<text string shorter than 58 characters> (depends on keyformat & keylength)	WEP key4 for encryption < 0000000000 >
algorithm (r/w)	TKIP	TKIP data encryption algorithm for WPA-PSK
	AES	AES data encryption algorithm for WPA-PSK
presaredkey (r/w)	<text string shorter than 58 characters>	WPA-PSK key for encryption < 00000000 >

Group: **IPFilter**

NAME	VALUE	DESCRIPTION
allowstart_<0~9> (r/w)	1.0.0.0 255.255.255.255	~ Allowed starting RTSP connection IP address < 1.0.0.0 >

allowend_<0~9> (r/w)	1.0.0.0 255.255.255.255	~	Allowed ending RTSP connection IP address < 255.255.255.255 >
denystart_<0~9> (r/w)	1.0.0.0 255.255.255.255	~	Denied starting RTSP connection IP address < blank >
denyend_<0~9> (r/w)	1.0.0.0 255.255.255.255	~	Denied ending RTSP connection IP address < blank >

Group: **Video**

NAME	VALUE	DESCRIPTION
text (r/w)	<text string shorter than 14 characters>	enclosed caption < blank >
codectype (r/w)	0	MPEG4
	1	MJPEG
keyinterval (r/w)	1, 3, 5, 10, 30, 60, 90, 120	Key frame interval < 60 >
size (r)	1	half
	2	half x 2
	3	normal
	4	normal x 2
	5	double
	256	This field is obsolete (use resolution)
resolution (r/w)	176x144 (for mobile)	Video resolution 176 x 144
	160x120	Video resolution 160 x 120
	320x240	Video resolution 320 x 240
	640x480 (for computer)	Video resolution 640 x 480
color (r/w)	0	monochrome
	1	color
quality (r/w)	0	fix bit rate
	1	fix quantization
quant	1	lowest quality of video

(r/w)	2	lower quality of video
	3	normal quality of video
	4	higher quality of video
	5	highest quality of video
bitrate (r/w)	20000	set bit rate to 20K bps
	30000	set bit rate to 30K bps
	40000	set bit rate to 40K bps
	50000	set bit rate to 50K bps
	64000	set bit rate to 64K bps
	128000	set bit rate to 128K bps
	256000	set bit rate to 256K bps
	512000	set bit rate to 512K bps
	768000	set bit rate to 768K bps
	1000000	set bit rate to 1000K bps
	1500000	set bit rate to 1500K bps
	2000000	set bit rate to 2000K bps
	3000000	set bit rate to 3000K bps
	4000000	set bit rate to 4000K bps
maxframe (r/w)	1	set maximum frame rate to 1 fps
	2	set maximum frame rate to 2 fps
	3	set maximum frame rate to 3 fps
	5	set maximum frame rate to 5 fps
	10	set maximum frame rate to 10 fps
	15	set maximum frame rate to 15 fps
	20	set maximum frame rate to 20 fps
	25	set maximum frame rate to 25 fps
	30 (for 60Hz only)	set maximum frame rate to 30 fps
mode (r/w) (in CMOS version only)	50	synchronize with 50Hz utility
	60	synchronize with 60Hz utility
whitebalance	0	auto white balance

(r/w) (in CMOS version only)	1	fixed indoor(3200K)
	2	fixed fluorescent (5500K)
	3	fixed outdoor(> 5500K)
flip (r/w)	1	flip image
	0	normal image
mirror (r/w)	1	mirror image
	0	normal image
imprnttimestam p (r/w)	1	Overlay time stamp on video
	0	Do not overlay time stamp on video

Group: **Audio**

NAME	VALUE	DESCRIPTION
type (r/w)	AAC4 (for computer)	set codec to AAC
	GAMR (for mobile)	set codec to GSM-AMR
aacbitrate (r/w)	16000	set AAC bitrate to 16K bps
	32000	set AAC bitrate to 32K bps
amrbitrate (r/w)	4750	set AMR bitrate to 4.75K bps
	5150	set AMR bitrate to 5.15K bps
	5900	set AMR bitrate to 5.9K bps
	6700	set AMR bitrate to 6.7K bps
	7400	set AMR bitrate to 7.4K bps
	7950	set AMR bitrate to 7.95K bps
	10200	set AMR bitrate to 10.2K bps
	12200	set AMR bitrate to 12.2K bps

Group: **Image**

NAME	VALUE	DESCRIPTION
brightness (r/w)	<-5 ~ 5>	Adjust brightness of image according to mode settings. <0>
saturation	<+1 ~ 5>	Adjust saturation of image according to mode

(r/w)		settings. <0>
contrast (r/w)	<-5 ~ 5>	Adjust contrast of image according to mode settings. <0>
sharpness (r/w)	<-3 ~ 3>	Adjust sharpness of image according to mode settings.

Group: **CAMCTRL**

NAME	VALUE	DESCRIPTION
panspeed (r/w)	-5 ~ 5	Pan speed
tiltspeed (r/w)	-5 ~ 5	Tilt speed
zoomspeed (r/w)	-5 ~ 5	Zoom speed
autospeed (r/w)	-5 ~ 5	Auto pan speed
dwelling (r/w)	0 ~ 9999	Time to dwelling when patrol
presetname_<0~9> (r/w)	Text string shorter than 40 characters.	The name of preset location
presetpan_<0~9> (r/w)	-1024 ~ 1024	The pan coordinate of preset location.
presettilt_<0~9> (r/w)	-56 ~ 144	The tilt coordinate of preset location.
patrolname_<0~19> (r/w)	Text string shorter than 40 characters.	The name of patrol location

Group: **Motion**

NAME	VALUE	DESCRIPTION
enabled (r/w)	0	disable motion detection
	1	enable motion detection
winenabled_<0~2>	0	disable motion window #1

(r/w)	1	enable motion window #1
winname_<0~2> (r/w)	<text string shorter than 14 characters >	name of motion window #1 < blank >
winleft_<0~2> (r/w)	0 ~ 320	Left coordinate of window position. < 0 >
wintop_<0~2> (r/w)	0 ~ 240	Top coordinate of window position. < 0 >
winwidth_<0~2> (r/w)	0 ~ 320	Width of motion detection window. < 0 >
winheight_<0~2> (r/w)	0 ~ 240	Height of motion detection window. < 0 >
winobjsize_<0~2> (r/w)	0 ~ 100	Percent of motion detection window < 0 >
winsensitivity_<0~2> > (r/w)	0 ~ 100	Sensitivity of motion detection window < 0 >
update (w)	1	Update the above motion detection settings to take effect

Group: **DDNS**

NAME	VALUE	DESCRIPTION
enable (r/w)	0, 1	Enable or disable the dynamic dns. < 0 >
provider (r/w)	1 ~ 6	dyndns.org (dynamic) dyndns.org (custom) tzo.com dhs.org safe100.net dyn-interfree.it < 1 >
hostname (r/w)	Text string shorter than 127 characters.	Your dynamic hostname. < blank >

usernameemail (r/w)	Text string shorter than 63 characters.	Your user or email to login ddns service provider <blank>
passwordkey (r/w)	Text string shorter than 20 characters.	Your password or key to login ddns service provider <blank>
update (w)	0, 1	Update the above ddns settings to take effect

Group: **UPNP**

NAME	VALUE	DESCRIPTION
enable (r/w)	0, 1	Enable or disable the UPNP presentation service. <1>

Group: **UPNPfor**

NAME	VALUE	DESCRIPTION
enable (r/w)	0, 1	Enable or disable the UPNP port forwarding service. <0>

Group: **App**

NAME	VALUE	DESCRIPTION
scriptname (r)	<text string shorter than 255 characters>	File name of script <script.vssx>
enablescrip (r/w)	0	Disable script
	1	Enable script

Group: **Syslog**

NAME	VALUE	DESCRIPTION
enableremotelog	0	disable remote log

(r/w)	1	enable remote log
serverip (r/w)	<IP address>	Log server IP address
serverport (r/w)	<514>	Server port used for log

Camera Control

Note: This request requires camera control access privilege

Method: GET/POST

Syntax:

<http://<servername>/cgi-bin/camctrl.cgi?> [move=<value>][&focus=<value>]
 [&iris=<value>][&speedpan=<value>][&speedtilt=<value>][&speedzoom=<value>]
 [&speedapp=<value>][&auto=<value>][&zoom=<value>][&return=<return page>]

parameter	value	description
move	home	Move to camera to home position
	up	Move camera up
	down	Move camera down
	left	Move camera left
	right	Move camera right
speedpan	-5 ~ 5	Set the pan speed
speedtilt	-5 ~ 5	Set the tilt speed
speedapp	-5 ~ 5	Set the auto pan/patrol speed
auto	pan	Auto pan
	patrol	Auto patrol

	stop	Stop camera
return	<return page>	Redirect to the page <return page> after the parameter is assigned. The <return page> can be a full URL path or relative path according to the current path. If you omit this parameter, it will redirect to an empty page.

Recall

Note: This request requires camera control access privilege

Method: GET

Syntax:

<http://<servername>/cgi-bin/recall.cgi?>

recall=<value>[&return= <return page>]

parameter	value	description
recall	Text string less than 30 characters	One of the present positions to recall.
return	<return page>	Redirect to the page <return page> after the parameter is assigned. The <return page> can be a full URL path or relative path according to the current path. If you omit this parameter, it will redirect to an empty page.

Application page CGI command

Note: This request requires administrator privilege.

Method: GET/POST

Syntax (For snapshot):

<http://<servername>/cgi-bin/admin/gen-new-eventd-conf.cgi?>

```
[<prefix_app_index>_snapshot_enable=<value>]
[&<prefix_app_index>_weekday=<value>]
[&<prefix_app_index>_time_method=<value>]
[&<prefix_app_index>_begin_time=<value>]
[&<prefix_app_index>_end_time=<value>]
[&<prefix_app_index>_prefix=<value>]
[&<prefix_app_index>_trigger_type=<value>]
[&<prefix_app_index>_md_win=<value>]
[&<prefix_app_index>_md_prenum=<value>]
[&<prefix_app_index>_md_postnum=<value>]
[&<prefix_app_index>_md_delay=<value>]
[&<prefix_app_index>_sq_interval=<value>]
[&<prefix_app_index>_send_method=<value>]
[&<prefix_app_index>_ftp_suffix=<value>]
```

Syntax (For videoclip):

<http://<servername>/cgi-bin/admin/gen-new-eventd-conf.cgi?>

```
[<prefix_app_index>_videoclip_enable=<value>]
[&<prefix_app_index>_weekday=<value>]
[&<prefix_app_index>_time_method=<value>]
[&<prefix_app_index>_begin_time=<value>]
[&<prefix_app_index>_end_time=<value>]
[&<prefix_app_index>_prefix=<value>]
[&<prefix_app_index>_trigger_type=<value>]
[&<prefix_app_index>_maxsize=<value>]
[&<prefix_app_index>_md_win=<value>]
[&<prefix_app_index>_md_delay=<value>]
[&<prefix_app_index>_sq_interval=<value>]
[&<prefix_app_index>_send_method=<value>]
```

```
[&<prefix_app_index>_ftp_suffix=<value>]
```

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/plain\r\n
Content-Length: <length>\r\n
\r\n
<depends on method value>
If(method == get || method == set)
{
  tue=<value>\r\n
  wed=<value>\r\n
  ...
}
Else if(method == normal)
{
  Application page contents
}
```

parameter	Value	description
prefix_app_index	sn1, sn2, vc	Index of application
snapshot_enable	0	Enable snapshot application
	1	Disable snapshot application
videoclip_enable	0	Disable videoclip application
	1	Enable videoclip application
weekday	0, 1, 2, 3, 4, 5, 6	The array indicate weekly schedule
time_method	<i>always</i>	24 hours full day
	<i>interval</i>	Select begin time and end time
begin_time	<i>hh:mm</i>	Begin time of weekly schedule
end_time	<i>hh:mm</i>	End time of weekly schedule
prefix	<text string	Snapshot/Videoclip file name prefix for both

	<i>shorter than 60 characters></i>	event and sequential operation
trigger_type	<i>motion</i>	Set trigger by motion detect
	<i>sequential</i>	Snapshot/Videoclip sequentially
maxsize	<i>0~500</i>	Video clip max file size
md_win	<i>0,1,2</i>	The array indicate which motion windows are used
md_prenum	<i>1~5</i>	The numbers of snapshot before event
md_postnum	<i>1~5</i>	The numbers of snapshot after event
md_delay	<i>1~999</i>	The delay seconds for detecting next motion event
sq_interval	<i>1~999</i>	The interval seconds of sequential snapshot
send_method	<i>mail</i>	Send snapshot by mail
	<i>ftp</i>	Send snapshot by ftp
ftp_suffix	<i>0/1</i>	Enable/Disable file name prefix

Capture single snapshot

Note: This request require normal user privilege

Method: GET/POST

Syntax:

<http://<servername>/cgi-bin/video.jpg>

Server will return the most up-to-date snapshot in JPEG format. The size and quality of image will be set according to the video settings on the server.

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: image/jpeg\r\n
```

[Content-Length: <image size>\r\n]

<binary JPEG image data>

Account management

Note: This request requires administrator privilege

Method: GET/POST

Syntax:

<http://<servername>/cgi-bin/admin/editaccount.cgi?>

method=<value>&username=<name>[&userpass=<value>][&privilege=<value>]

[&privilege=<value>][...][&return=<return page>]

parameter	value	Description
method	add	Add an account to server. When using this method, "username" field is necessary. It will use default value of other fields if not specified.
	delete	Remove an account from server. When using this method, "username" field is necessary, and others are ignored.
	edit	Modify the account password and privilege. When using this method, "username" field is necessary, and other fields are optional. If not specified, it will keep original settings.
username	<name>	The name of user to add, delete or edit
userpass	<value>	The password of new user to add or that of old user to modify. The default value is an empty string.

privilege	<value>	The privilege of user to add or to modify. The privilege can be the addition of the following values. Ex: A user with configure access can be assigned privilege as privilege=conf .
	conf	configuration privilege
return	<return page>	Redirect to the page <return page> after the parameter is assigned. The <return page> can be a full URL path or relative path according the the current path. If you omit this parameter, it will redirect to an empty page.

System logs

Note: This request require administrator privilege

Method: GET/POST

Syntax:

<http://<servername>/cgi-bin/admin/syslog.cgi>

Server will return the up-to-date system log.

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/plain\r\n
Content-Length: <syslog length>\r\n
\r\n
<system log information>\r\n
```

Configuration file

Note: This request requires administrator privilege

Method: GET/POST

Syntax:

<http://<servername>/cgi-bin/admin/configfile.cgi>

Server will return the up-to-date configuration file.

Return:

```
HTTP/1.0 200 OK\r\n
Content-Type: text/plain\r\n
Content-Length: <configuration file length>\r\n
\r\n
<configuration data>\r\n
```

Upgrade firmware

Note: This request requires administrator privilege

Method: POST

Syntax:

<http://<servername>/cgi-bin/admin/upgrade.cgi>

Post data:

```
fimage=<file name>[&return=<return page>]\r\n
\r\n
<multipart encoded form data>
```

Server will accept the upload file named <file name> to be upgraded the firmware and return with <return page> if indicated.

C. Technical specifications

Models <ul style="list-style-type: none"> ● TC5632 ● TC5633 (Wireless) System <ul style="list-style-type: none"> ● CPU: VVTK-1000 SoC ● Flash: 4MB ● RAM: 32MB ● Embedded OS: Linux 2.4 Lens <ul style="list-style-type: none"> ● Fixed Iris, f=4.5mm, F2.8, Image Sensor <ul style="list-style-type: none"> ● 1/4" CMOS sensor with VGA resolution Minimum Illumination <ul style="list-style-type: none"> ● 1.0 Lux / F2.0 Video <ul style="list-style-type: none"> ● Compression: MJPEG & MPEG-4 ● Streaming: <ul style="list-style-type: none"> Simultaneous dual-stream MPEG-4 streaming over UDP, TCP, or HTTP MPEG-4 multicast streaming MJPEG streaming over HTTP ● Supports 3GPP mobile surveillance ● Resolutions <ul style="list-style-type: none"> MJPEG video with resolution up to 640x480 MPEG-4 video with resolution up to 640x480 ● Frame rates: 640x480 up to 30fps Image settings <ul style="list-style-type: none"> ● Adjustable image size, quality, and bit rate ● Time stamp and text caption overlay ● Flip & mirror ● Configurable brightness, contrast, saturation, sharpness, and white balance ● AGC, AWB, AEC (automatic exposure control) Audio	Alarm and Event Management <ul style="list-style-type: none"> ● Triple-window video motion detection ● One D/I and one D/O for external sensor and alarm ● Event notification using HTTP, SMTP, or FTP ● Local recording of MP4 file ● Passive infrared sensor (PIR) for motion detection Security <ul style="list-style-type: none"> ● Triple-level user access with password protection ● IP address filtering ● Wireless: WEP, WPA-PSK, WPA2 (TC5633) ● Privacy button Dimension <ul style="list-style-type: none"> ● 81mm (D) x 84mm (W) x 99mm (H) Weight <ul style="list-style-type: none"> ● Net: 271g (TC5632) ● Net: 282g (TC5633) LED Indicator <ul style="list-style-type: none"> ● System power and status indicator ● System activity and network link indicator ● Privacy button status Power <ul style="list-style-type: none"> ● 12V DC ● Consumption: <ul style="list-style-type: none"> Max 12W (TC5632) Max 13W (TC5633) Operating Environments <ul style="list-style-type: none"> ● Temperature: 0 ° ~ 40 ° C ● Humidity: 20 % ~ 80 % RH Viewing System Requirements <ul style="list-style-type: none"> ● OS: Microsoft Windows 2000/XP/Vista ● Browser: Internet Explorer 6.x or above ● Cellphone: 3GPP player ● Real Player 10.5 or above ● Quick Time 6.5 or above
---	---

<ul style="list-style-type: none"> ● Compression: GSM-AMR speech encoding, bit rate: 4.75 kbps to 12.2 kbps MPEG-4 AAC audio encoding, bit rate: 16 kbps to 128 kbps ● Interface: Built-in microphone ● Supports audio mute <p>Networking</p> <ul style="list-style-type: none"> ● 10/100 Mbps Ethernet, RJ-45 ● Protocols: IPv4, TCP/IP, HTTP, UPnP, RTSP/RTP/RTCP, IGMP, SMTP, FTP, Telnet, DHCP, NTP, DNS, DDNS, and PPPoE ● Built-in 802.11b/g WLAN (TC5633) 	<p>Applications</p> <ul style="list-style-type: none"> ● Installation Wizard 2 ● 16-CH recording software ● Supports firmware upgrade ● SDK available for application development and system integration <p>EMI & Safety</p> <ul style="list-style-type: none"> ● CE, FCC
--	--

Technology License Notice

MPEG-4 AAC Technology

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 AAC AUDIO PATENT LICENSE. THIS PRODUCT MAY NOT BE DECOMPILED, REVERSE-ENGINEERED OR COPIED, EXCEPT REGARD TO PC SOFTWARE, YOU MAY MAKE SINGLE COPIES FOR ARCHIVAL PURPOSES. FOR MORE INFORMATION, PLEASE REFER TO [HTTP://WWW.VIALICENSING.COM](http://WWW.VIALICENSING.COM).

MPEG-4 Visual Technology

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

AMR-NB Standard

THIS PRODUCT IS LICENSED UNDER THE AMR-NB STANDARD PATENT LICENSE AGREEMENT. WITH RESPECT TO THE USE OF THIS PRODUCT, THE FOLLOWING LICENSORS' PATENTS MAY APPLY:

TELEFONAKIEBOLAGET ERICSSON AB: US PAT. 6192335; 6275798; 6029125; 6424938; 6058359. NOKIA CORPORATION: US PAT. 5946651; 6199035. VOICEAGE CORPORATION: AT PAT. 0516621; BE PAT. 0516621; CA PAT. 2010830; CH PAT. 0516621; DE PAT. 0516621; DK PAT. 0516621; ES PAT. 0516621; FR PAT. 0516621; GB PAT. 0516621; GR PAT. 0516621; IT PAT. 0516621; LI PAT. 0516621; LU PAT. 0516621; NL PAT. 0516621; SE PAT. 0516621; US PAT. 5444816; AT PAT. 819303/AT E 198805T1; AU PAT. 697256; BE PAT. 819303; BR PAT. 9604838-7; CA PAT. 2216315; CH PAT. 819303; CN PAT. ZL96193827.7; DE PAT. 819303/DE69611607T2; DK PAT. 819303; ES PAT. 819303; EP PAT. 819303; FR PAT. 819303; GB PAT. 819303; IT PAT. 819303; JP PAT. APP. 8-529817; NL PAT. 819303; SE PAT. 819303; US PAT. 5664053. THE LIST MAY BE UPDATED FROM TIME TO TIME BY LICENSORS AND A CURRENT VERSION OF WHICH IS AVAILABLE ON LICENSOR'S WEBSITE AT

[HTTP://WWW.VOICEAGE.COM](http://WWW.VOICEAGE.COM).

Electromagnetic Compatibility (EMC)

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions.

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

USA - This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a partial installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Europe (CE) - This digital equipment fulfills the requirement for radiated emission according to limit B of EN55022/1998, and the requirement for immunity according to EN50082-1/1992.

Liability

Vivotek Inc. cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Vivotek Inc. makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for any particular purpose.